XVF3000/XVF3100-TQ128 Datasheet

2017/10/10 XMOS © 2017, All Rights Reserved Document Number: X011274,



## **Table of Contents**

1	xCORE VocalFusion Voice Processors
2	XVF3000/XVF3100-TQ128 Features
3	Pin Configuration
4	Signal Description
5	Example Application Diagram
6	Product Overview
7	PLL
8	Boot Procedure
9	Memory
10	USB PHY
11	JTAG
12	Board Integration
13	Electrical Characteristics
14	Package Information
15	Ordering Information
Anne	endices
A	Configuration of the XVF3000/XVF3100-TQ128
R	Processor Status Configuration
č	Tile Configuration
D	Node Configuration
F	USB Node Configuration
È.	USB PHY Configuration
G	JTAG, xSCOPE and Debugging
н	Schematics Design Check List
2	PCB Layout Design Check List
1	Microphone and Acoustic DSP Documentation
J K	
	Associated Design Documentation
	Related Documentation
Μ	Revision History

## TO OUR VALUED CUSTOMERS

It is our intention to provide you with accurate and comprehensive documentation for the hardware and software components used in this product. To subscribe to receive updates, visit <a href="http://www.xmos.com/">http://www.xmos.com/</a>.

XMOS Ltd. is the owner or licensee of the information in this document and is providing it to you "AS IS" with no warranty of any kind, express or implied and shall have no liability in relation to its use. XMOS Ltd. makes no representation that the information, or any particular implementation thereof, is or will be free from any claims of infringement and again, shall have no liability in relation to any such claims.

XMOS and the XMOS logo are registered trademarks of XMOS Ltd in the United Kingdom and other countries, and may not be used without written permission. Company and product names mentioned in this document are the trademarks or registered trademarks of their respective owners.

# 1 xCORE VocalFusion Voice Processors

xCORE VocalFusion devices are 32-bit multicore microcontrollers that bring the low latency and timing determinism of the xCORE architecture to voice interface applications. Unlike conventional microcontrollers, xCORE VocalFusion devices execute multiple real-time tasks simultaneously and communicate between tasks using a high speed network. Because xCORE VocalFusion devices are completely deterministic, you can write software to implement functions that traditionally require dedicated hardware.

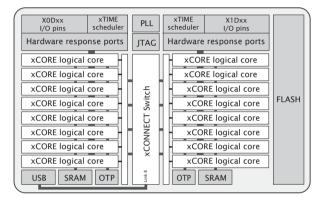


Figure 1: XVF3000 block diagram

Key features of the XVF3000/XVF3100-TQ128 include:

- ► **Tiles**: Devices consist of two xCORE tiles. Each tile contains eight 32-bit xCOREs with highly integrated I/O and on-chip memory.
- Logical cores Each logical core can execute tasks such as computational code, DSP code, control software (including logic decisions and executing a state machine) or software that handles I/O. Section 6.1
- ▶ **xTIME scheduler** The xTIME scheduler performs functions similar to an RTOS, in hardware. It services and synchronizes events in a core, so there is no requirement for interrupt handler routines. The xTIME scheduler triggers cores on events generated by hardware resources such as the I/O pins, communication channels and timers. Once triggered, a core runs independently and concurrently to other cores, until it pauses to wait for more events. Section 6.2
- Channels and channel ends Tasks running on logical cores communicate using channels formed between two channel ends. Data can be passed synchronously or asynchronously between the channel ends assigned to the communicating tasks. Section 6.5
- xCONNECT Switch and Links Between tiles, channel communications are implemented over a high performance network of xCONNECT Links and routed through a hardware xCONNECT Switch. Section 6.6

-XM()S



- ▶ **Ports** The I/O pins are connected to the processing cores by Hardware Response ports. The port logic can drive its pins high and low, or it can sample the value on its pins optionally waiting for a particular condition. Section 6.3
- Clock blocks xCORE devices include a set of programmable clock blocks that can be used to govern the rate at which ports execute. Section 6.4
- Memory Each xCORE Tile integrates a bank of SRAM for instructions and data, and a block of one-time programmable (OTP) memory that can be configured for system wide security features. Section 9
- PLL The PLL is used to create a high-speed processor clock given a low speed external oscillator. Section 7
- ▶ **USB** The USB PHY provides High-Speed and Full-Speed, device, host, and on-thego functionality. Data is communicated through ports on the digital node. A library is provided to implement USB device functionality. Section 10
- ▶ Flash The device has a built-in 2MBflash. Section 8
- JTAG The JTAG module can be used for loading programs, boundary scan testing, in-circuit source-level debugging and programming the OTP memory. Section 11

#### 1.1 Software

Devices are programmed using C, C++ or xC (C with multicore extensions). XMOS provides tested and proven software libraries, which allow you to quickly add interface and processor functionality such as USB, Ethernet, PWM, graphics driver, and audio EQ to your applications.

#### 1.2 Microphone and Acoustic DSP

XVF3000/XVF3100-TQ128 devices integrate advanced DSP algorithms that include Acoustic Echo Cancellation (AEC), beamforming, dereverberation, noise suppression and gain control. They can be used to deliver superior far-field voice interface solutions for home and conferencing applications.

See XVF3000/3100 DSP Databrief for further information.

#### 1.3 Keyword Trigger Solutions

XVF3100 devices offer keyword trigger detection based on Sensory TrulyHandsfree<sup>™</sup> technology. Contact XMOS for further information.

#### 1.4 xTIMEcomposer Studio

The xTIMEcomposer Studio development environment provides all the tools you need to write and debug your programs, profile your application, and write images into flash memory or OTP memory on the device. Because xCORE devices operate deterministically, they can be simulated like hardware within xTIMEcomposer: uniquely in the embedded world, xTIMEcomposer Studio therefore includes a static

timing analyzer, cycle-accurate simulator, and high-speed in-circuit instrumentation.

xTIMEcomposer can be driven from either a graphical development environment, or the command line. The tools are supported on Windows, Linux and MacOS X and available at no cost from xmos.com/downloads. Information on using the tools is provided in the xTIMEcomposer User Guide.

-XMOS<sup>®</sup>

# 2 XVF3000/XVF3100-TQ128 Features

#### ► Multicore Microcontroller with Advanced Multi-Core RISC Architecture

- 16 real-time logical cores on 2 xCORE tiles
- Cores share up to 1200 MIPS
  - Up to 2400 MIPS in dual issue mode
- Each logical core has:
  - Guaranteed throughput of between 1/5 and 1/8 of tile MIPS
  - 16x32bit dedicated registers
- 167 high-density 16/32-bit instructions
  - All have single clock-cycle execution (except for divide)
  - 32x32 ${\rightarrow}64$  bit MAC instructions for DSP, arithmetic and user-definable cryptographic functions
- ▶ USB PHY, fully compliant with USB 2.0 specification

#### Programmable I/O

- 81 general-purpose I/O pins, configurable as input or output
  - Up to 25 x 1bit port, 12 x 4bit port, 8 x 8bit port, 4 x 16bit port
  - 4 xCONNECT links
- Port sampling rates of up to 60 MHz with respect to an external clock
- 64 channel endss (32 per tile) for communication with other cores, on or off-chip

#### Memory

- 512KB internal single-cycle SRAM (max 256KB per tile) for code and data storage
- 16KB internal OTP (max 8KB per tile) for application boot code
- 2MB internal flash for application code and overlays

#### Hardware resources

- 12 clock blocks (6 per tile)
- 20 timers (10 per tile)
- 8 locks (4 per tile)

#### Microphone and Acoustic DSP


- Advanced DSP algorithms including Acoustic Echo Cancellation (AEC), beamforming, dereverberation, noise suppression and gain control.
- XVF3100 includes Sensory TrulyHandsfree keyword trigger detection. See Section 15 for ordering information.

#### JTAG Module for On-Chip Debug

- Security Features
  - Programming lock disables debug and prevents read-back of memory contents
  - AES bootloader ensures secrecy of IP held on external flash memory
- Ambient Temperature Range
  - 0°C to 70°C
- Power Consumption
  - 580 mA (typical)
- 128-pin TQFP package 0.4 mm pitch



# 3 Pin Configuration

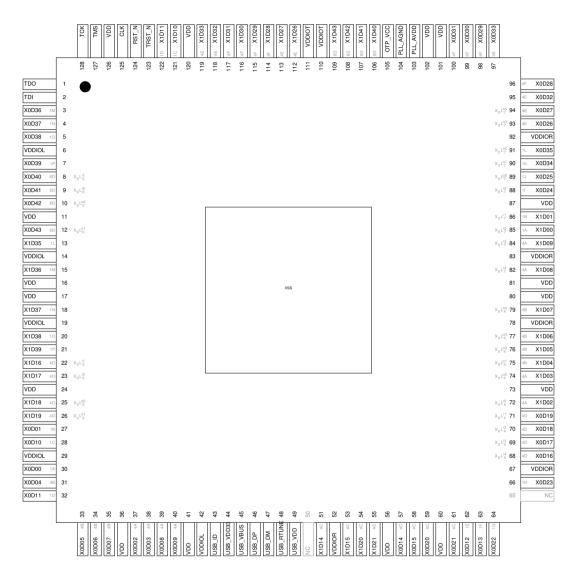

-XMOS

## 4 Signal Description

This section lists the signals and I/O pins available on the XVF3000/XVF3100-TQ128. The device provides a combination of 1 bit, 4 bit, 8 bit and 16 bit ports, as well as wider ports that are fully or partially (gray) bonded out. All pins of a port provide either output or input, but signals in different directions cannot be mapped onto the same port.

Pins may have one or more of the following properties:

- PD/PU: The IO pin has a weak pull-down or pull-up resistor. The resistor is enabled during and after reset. Enabling a link or port that uses the pin disables the resistor. Thereafter, the resistor can be enabled or disabled under software control. The resistor is designed to ensure defined logic input state for unconnected pins. It should not be used to pull external circuitry. Note that the resistors are highly non-linear and only a maximum pull current is specified in Section 13.3.
- ST: The IO pin has a Schmitt Trigger on its input.
- IOL/IOT/IOR: The IO pin is powered from VDDIOL, VDDIOT, and VDDIOR respectively

	Power pins (10)		
Signal	Function	Туре	Properties
GND	Digital ground	GND	
OTP_VCC	OTP power supply	PWR	
PLL_AGND	Analog ground for PLL	PWR	
PLL_AVDD	Analog PLL power	PWR	
USB_VDD	Digital tile power	PWR	
USB_VDD33	USB Analog power	PWR	
VDD	Digital tile power	PWR	
VDDIOL	Digital I/O power (left)	PWR	
VDDIOR	Digital I/O power (right)	PWR	
VDDIOT	Digital I/O power (top)	PWR	

	JTAG pins (6)		
Signal	Function	Туре	Properties
RST_N	Global reset input	Input	IOL, PU, ST
тск	Test clock	Input	IOL, PD, ST
TDI	Test data input	Input	IOL, PU
TDO	Test data output	Output	IOL, PD
TMS	Test mode select	Input	IOL, PU
TRST_N	Test reset input	Input	IOL, PU, ST

-XM()S

			1/	0 pins	5 (81)			
Signal	Function						Туре	Properties
X0D00		1A <sup>0</sup>					I/O	IOL, PD
X0D01		1 B <sup>0</sup>					I/0—	IOL, PD
X0D02			4A <sup>0</sup>	8A <sup>0</sup>	16A <sup>0</sup>	32A <sup>20</sup>	I/O	IOL, PD
X0D03			4A <sup>1</sup>	8A <sup>1</sup>	16A <sup>1</sup>	32A <sup>21</sup>	I/O	IOL, PD
X0D04			4B <sup>0</sup>	8A <sup>2</sup>	16A <sup>2</sup>	32A <sup>22</sup>	I/0—	IOL, PD
X0D05			4B <sup>1</sup>	8A <sup>3</sup>	16A <sup>3</sup>	32A <sup>23</sup>	I/0—	IOL, PD
X0D06			4B <sup>2</sup>	8A <sup>4</sup>	16A <sup>4</sup>	32A <sup>24</sup>	I/0—	IOL, PD
X0D07			4B <sup>3</sup>	8A <sup>5</sup>	16A <sup>5</sup>	32A <sup>25</sup>	I/0—	IOL, PD
X0D08			4A <sup>2</sup>	8A <sup>6</sup>	16A <sup>6</sup>	32A <sup>26</sup>	I/O	IOL, PD
X0D09			4A <sup>3</sup>	8A <sup>7</sup>	16A <sup>7</sup>	32A <sup>27</sup>	I/O	IOL, PD
X0D10		1C <sup>0</sup>					I/0—	IOL, PD
X0D11		1D <sup>0</sup>					I/0	IOL, PD
X0D12		1E <sup>0</sup>					I/O	IOR, PD
X0D13		1F <sup>0</sup>					I/O	IOR, PD
X0D14			4C <sup>0</sup>	8B <sup>0</sup>	16A <sup>8</sup>	32A <sup>28</sup>	I/O	IOR, PD
X0D15			4C <sup>1</sup>	8B1	16A <sup>9</sup>	32A <sup>29</sup>	I/O	IOR, PD
X0D16	X <sub>0</sub> L4 <sup>4</sup> <sub>in</sub>		4D <sup>0</sup>	8B <sup>2</sup>	16A <sup>10</sup>		I/O	IOR, PD
X0D17	X <sub>0</sub> L4 <sup>3</sup> <sub>in</sub>		4D <sup>1</sup>	8B <sup>3</sup>	16A <sup>11</sup>		I/O	IOR, PD
X0D18	X <sub>0</sub> L4 <sup>2</sup> <sub>in</sub>		4D <sup>2</sup>	8B <sup>4</sup>	16A <sup>12</sup>		I/O	IOR, PD
X0D19	X <sub>0</sub> L4 <sup>1</sup>		4D <sup>3</sup>	8B <sup>5</sup>	16A <sup>13</sup>		I/O	IOR, PD
X0D20			4C <sup>2</sup>	8B <sup>6</sup>	16A <sup>14</sup>	32A <sup>30</sup>	I/O	IOR, PD
X0D21			4C <sup>3</sup>	8B <sup>7</sup>	16A <sup>15</sup>	32A <sup>31</sup>	I/O	IOR, PD
X0D22		1G <sup>0</sup>					I/O	IOR, PD
X0D23		1H <sup>0</sup>					I/O	IOR, PD
X0D24	X <sub>0</sub> L7 <sup>0</sup>	11 <sup>0</sup>					I/O	IOR, PD
X0D25	X <sub>0</sub> L7 <sup>0</sup> <sub>out</sub>	1J <sup>0</sup>					I/O	IOR, PD
X0D26	X <sub>0</sub> L7 <sup>3</sup> <sub>out</sub>		4E <sup>0</sup>	8C <sup>0</sup>	16B <sup>0</sup>		I/O	IOR, PD
X0D27	X <sub>0</sub> L7 <sup>4</sup> <sub>out</sub>		4E <sup>1</sup>	8C1	16B <sup>1</sup>		I/O	IOR, PD
X0D28			4F <sup>0</sup>	8C <sup>2</sup>	16B <sup>2</sup>		I/O	IOR, PD
X0D29			4F <sup>1</sup>	8C <sup>3</sup>	16B <sup>3</sup>		I/O	IOR, PD
X0D30			4F <sup>2</sup>	8C <sup>4</sup>	16B <sup>4</sup>		I/O	IOR, PD
X0D31			4F <sup>3</sup>	8C <sup>5</sup>	16B <sup>5</sup>		I/O	IOR, PD
X0D32			4E <sup>2</sup>	8C <sup>6</sup>	16B <sup>6</sup>		I/O	IOR, PD
X0D33			4E <sup>3</sup>	8C <sup>7</sup>	16B <sup>7</sup>		I/O	IOR, PD
X0D34	X <sub>0</sub> L7 <sup>1</sup> <sub>out</sub>	1K <sup>0</sup>					I/O	IOR, PD
X0D35	X <sub>0</sub> L7 <sup>2</sup> <sub>out</sub>	1L <sup>0</sup>					I/O	IOR, PD
X0D36		1M <sup>0</sup>		8D <sup>0</sup>	16B <sup>8</sup>		I/O	IOL, PD
X0D37		1N <sup>0</sup>		8D1	16B <sup>9</sup>		I/O	IOL, PD
X0D38		10 <sup>0</sup>		8D <sup>2</sup>	16B <sup>10</sup>		I/O	IOL, PD
X0D39		1 P <sup>0</sup>		8D <sup>3</sup>	16B <sup>11</sup>		I/O	IOL, PD
X0D40	X <sub>0</sub> L0 <sup>1</sup>			8D <sup>4</sup>	16B <sup>12</sup>		I/O	IOL, PD

-XMOS<sup>®</sup>-

X011274,

8

Signal	Function					Туре	Properties
X0D41	X <sub>0</sub> L0 <sup>0</sup>		8D <sup>5</sup>	16B <sup>13</sup>		1/0	IOL, PD
X0D42	X <sub>0</sub> L0 <sup>0</sup> <sub>out</sub>		8D <sup>6</sup>	16B <sup>14</sup>		1/0	IOL, PD
X0D43	X <sub>0</sub> L0 <sup>1</sup> <sub>out</sub>		8D <sup>7</sup>	16B <sup>15</sup>		1/0	IOL, PD
X1D00	$X_0L7_{in}^2$ 1A <sup>0</sup>					1/0	IOR, PD
X1D01	$X_0 L7_{in}^1$ 1B <sup>0</sup>					1/0	IOR, PD
X1D02	X <sub>0</sub> L4 <sup>0</sup>	4A <sup>0</sup>	8A <sup>0</sup>	16A <sup>0</sup>	32A <sup>20</sup>	1/0	IOR, PD
X1D03	X <sub>0</sub> L4 <sup>0</sup> <sub>out</sub>	4A <sup>1</sup>	8A <sup>1</sup>	16A <sup>1</sup>	32A <sup>21</sup>	1/0	IOR, PD
X1D04	X <sub>0</sub> L4 <sup>1</sup> <sub>out</sub>	4B <sup>0</sup>	8A <sup>2</sup>	16A <sup>2</sup>	32A <sup>22</sup>	I/O	IOR, PD
X1D05	X <sub>0</sub> L4 <sup>2</sup> <sub>out</sub>	4B <sup>1</sup>	8A <sup>3</sup>	16A <sup>3</sup>	32A <sup>23</sup>	I/O	IOR, PD
X1D06	X <sub>0</sub> L4 <sup>3</sup> <sub>out</sub>	4B <sup>2</sup>	8A <sup>4</sup>	16A <sup>4</sup>	32A <sup>24</sup>	I/O	IOR, PD
X1D07	X <sub>0</sub> L4 <sup>4</sup> <sub>out</sub>	4B <sup>3</sup>	8A <sup>5</sup>	16A <sup>5</sup>	32A <sup>25</sup>	I/O	IOR, PD
X1D08	X <sub>0</sub> L7 <sup>4</sup>	4A <sup>2</sup>	8A <sup>6</sup>	16A <sup>6</sup>	32A <sup>26</sup>	1/0	IOR, PD
X1D09	X <sub>0</sub> L7 <sup>3</sup>	4A <sup>3</sup>	8A <sup>7</sup>	16A <sup>7</sup>	32A <sup>27</sup>	1/0	IOR, PD
X1D10	1C <sup>0</sup>					1/0	IOT, PD
X1D11	1D <sup>0</sup>					1/0	IOT, PD
X1D14		4C <sup>0</sup>	8B <sup>0</sup>	16A <sup>8</sup>	32A <sup>28</sup>	I/O	IOR, PD
X1D15		4C <sup>1</sup>	8B <sup>1</sup>	16A <sup>9</sup>	32A <sup>29</sup>	I/O	IOR, PD
X1D16	X <sub>0</sub> L3 <sup>1</sup>	4D <sup>0</sup>	8B <sup>2</sup>	16A <sup>10</sup>		I/O	IOL, PD
X1D17	X <sub>0</sub> L3 <sup>0</sup> <sub>in</sub>	4D <sup>1</sup>	8B <sup>3</sup>	16A <sup>11</sup>		1/0	IOL, PD
X1D18	X <sub>0</sub> L3 <sup>0</sup> <sub>out</sub>	4D <sup>2</sup>	8B <sup>4</sup>	16A <sup>12</sup>		I/O	IOL, PD
X1D19	X <sub>0</sub> L3 <sup>1</sup> <sub>out</sub>	4D <sup>3</sup>	8B <sup>5</sup>	16A <sup>13</sup>		I/O	IOL, PD
X1D20		4C <sup>2</sup>	8B <sup>6</sup>	16A <sup>14</sup>	32A <sup>30</sup>	I/O	IOR, PD
X1D21		4C <sup>3</sup>	8B <sup>7</sup>	16A <sup>15</sup>	32A <sup>31</sup>	I/O	IOR, PD
X1D26		4E <sup>0</sup>	8C <sup>0</sup>	16B <sup>0</sup>		I/O	IOT, PD
X1D27		4E <sup>1</sup>	8C1	16B <sup>1</sup>		I/O	IOT, PD
X1D28		4F <sup>0</sup>	8C <sup>2</sup>	16B <sup>2</sup>		I/O	IOT, PD
X1D29		4F <sup>1</sup>	8C <sup>3</sup>	16B <sup>3</sup>		I/O	IOT, PD
X1D30		4F <sup>2</sup>	8C <sup>4</sup>	16B <sup>4</sup>		I/O	IOT, PD
X1D31		4F <sup>3</sup>	8C <sup>5</sup>	16B <sup>5</sup>		I/O	IOT, PD
X1D32		4E <sup>2</sup>	8C <sup>6</sup>	16B <sup>6</sup>		I/O	IOT, PD
X1D33		4E <sup>3</sup>	8C <sup>7</sup>	16B <sup>7</sup>		I/O	IOT, PD
X1D35	1L <sup>0</sup>					I/O	IOL, PD
X1D36	1 M <sup>0</sup>		8D <sup>0</sup>	16B <sup>8</sup>		I/O	IOL, PD
X1D37	1N <sup>0</sup>		8D <sup>1</sup>	16B <sup>9</sup>		I/O	IOL, PD
X1D38	100		8D <sup>2</sup>	16B <sup>10</sup>		I/O	IOL, PD
X1D39	1 P <sup>0</sup>		8D <sup>3</sup>	16B <sup>11</sup>		I/O	IOL, PD
X1D40			8D <sup>4</sup>	16B <sup>12</sup>		I/O	IOT, PD
X1D41			8D <sup>5</sup>	16B <sup>13</sup>		I/O	IOT, PD
X1D42			8D <sup>6</sup>	16B <sup>14</sup>		I/O	IOT, PD
X1D43			8D <sup>7</sup>	16B <sup>15</sup>		I/0	IOT, PD

-XMOS°-

	usb pins (5)		
Signal	Function	Туре	Properties
USB_DM	USB Serial Data Inverted	I/O	
USB_DP	USB Serial Data	I/O	
USB_ID	USB Device ID (OTG) - Reserved	I/O	
USB_RTUNE	USB resistor	I/O	
USB_VBUS	USB Power Detect Pin	I/O	

System pins (1)										
Signal	Function	Туре	Properties							
CLK	PLL reference clock	Input	IOL, PD, ST							

-XMOS<sup>®</sup>-

# 5 Example Application Diagram

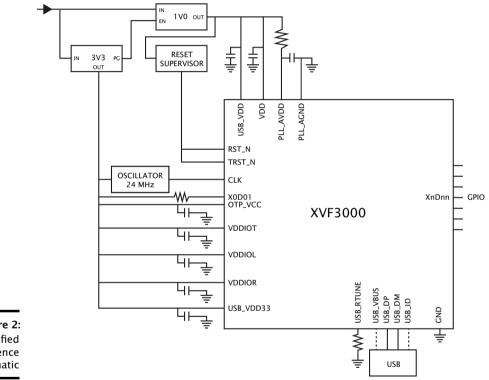


Figure 2: Simplified Reference Schematic

- ▶ see Section 10 for details on the USB PHY
- see Section 12 for details on the power supplies and PCB design

-XMOS

## 6 Product Overview

The XVF3000/XVF3100-TQ128 is a powerful device that consists of two xCORE Tiles, each comprising a flexible logical processing cores with tightly integrated I/O and on-chip memory.

## 6.1 Logical cores

Each tile has 8 active logical cores, which issue instructions down a shared fivestage pipeline. Instructions from the active cores are issued round-robin. If up to five logical cores are active, each core is allocated a fifth of the processing cycles. If more than five logical cores are active, each core is allocated at least 1/n cycles (for *n* cores). Figure 3 shows the guaranteed core performance depending on the number of cores used.

Figure	3:
Logical cor	e
performanc	e

gure 3:	Speed	MIPS	Frequency	Minimum MIPS per core (for <i>n</i> cores)														
cal core	grade			1	2	3	4	5	6	7	8							
rmance	12	1200 MIPS	600 MHz	120	120	120	120	120	100	85	75							

There is no way that the performance of a logical core can be reduced below these predicted levels (unless *priority threads* are used: in this case the guaranteed minimum performance is computed based on the number of priority threads as defined in the architecture manual). Because cores may be delayed on I/O, however, their unused processing cycles can be taken by other cores. This means that for more than five logical cores, the performance of each core is often higher than the predicted minimum but cannot be guaranteed.

The logical cores are triggered by events instead of interrupts and run to completion. A logical core can be paused to wait for an event.

## 6.2 xTIME scheduler


The xTIME scheduler handles the events generated by xCORE Tile resources, such as channel ends, timers and I/O pins. It ensures that all events are serviced and synchronized, without the need for an RTOS. Events that occur at the I/O pins are handled by the Hardware-Response ports and fed directly to the appropriate xCORE Tile. An xCORE Tile can also choose to wait for a specified time to elapse, or for data to become available on a channel.

Tasks do not need to be prioritised as each of them runs on their own logical xCORE. It is possible to share a set of low priority tasks on a single core using cooperative multitasking.

## 6.3 Hardware Response Ports

Hardware Response ports connect an xCORE tile to one or more physical pins and as such define the interface between hardware attached to the XVF3000/XVF3100-TQ128, and the software running on it. A combination of 1 bit, 4bit, 8bit, 16bit and



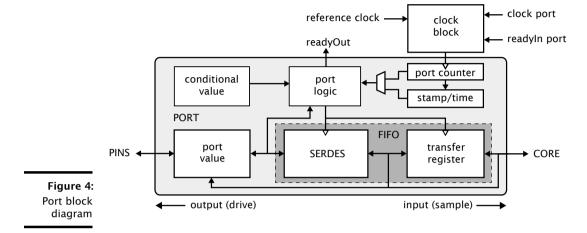

32bit ports are available. All pins of a port provide either output or input. Signals in different directions cannot be mapped onto the same port.

The port logic can drive its pins high or low, or it can sample the value on its pins, optionally waiting for a particular condition. Ports are accessed using dedicated instructions that are executed in a single processor cycle. XVF3000/XVF3100 IO pins can be used as *open collector* outputs, where signals are driven low if a zero is output, but left high impedance if a one is output. This option is set on a per-port basis.


Data is transferred between the pins and core using a FIFO that comprises a SERDES and transfer register, providing options for serialization and buffered data.

Each port has a 16-bit counter that can be used to control the time at which data is transferred between the port value and transfer register. The counter values can be obtained at any time to find out when data was obtained, or used to delay I/O until some time in the future. The port counter value is automatically saved as a timestamp, that can be used to provide precise control of response times.

The ports and xCONNECT links are multiplexed onto the physical pins. If an xConnect Link is enabled, the pins of the underlying ports are disabled. If a port is enabled, it overrules ports with higher widths that share the same pins. The pins on the wider port that are not shared remain available for use when the narrower port is enabled. Ports always operate at their specified width, even if they share pins with another port.

## 6.4 Clock blocks

xCORE devices include a set of programmable clocks called clock blocks that can be used to govern the rate at which ports execute. Each xCORE tile has six clock blocks: the first clock block provides the tile reference clock and runs at a default frequency of 100MHz; the remaining clock blocks can be set to run at different frequencies.

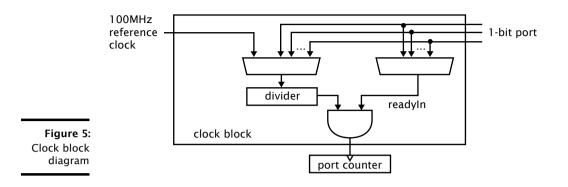

A clock block can use a 1-bit port as its clock source allowing external application clocks to be used to drive the input and output interfaces. XVF3000/XVF3100 clock blocks optionally divide the clock input from a 1-bit port.

In many cases I/O signals are accompanied by strobing signals. The xCORE ports can input and interpret strobe (known as readyIn and readyOut) signals generated by external sources, and ports can generate strobe signals to accompany output data.

On reset, each port is connected to clock block 0, which runs from the xCORE Tile reference clock.

## 6.5 Channels and Channel Ends

Logical cores communicate using point-to-point connections, formed between two channel ends. A channel-end is a resource on an xCORE tile, that is allocated by the program. Each channel-end has a unique system-wide identifier that comprises a unique number and their tile identifier. Data is transmitted to a channel-end by an output-instruction; and the other side executes an input-instruction. Data can be passed synchronously or asynchronously between the channel ends.

## 6.6 xCONNECT Switch and Links

XMOS devices provide a scalable architecture, where multiple xCORE devices can be connected together to form one system. Each xCORE device has an xCONNECT interconnect that provides a communication infrastructure for all tasks that run on the various xCORE tiles on the system.

The interconnect relies on a collection of switches and XMOS links. Each xCORE device has an on-chip switch that can set up circuits or route data. The switches are connected by xConnect Links. An XMOS link provides a physical connection between two switches. The switch has a routing algorithm that supports many different topologies, including lines, meshes, trees, and hypercubes.

The links operate in either 2 wires per direction or 5 wires per direction mode, depending on the amount of bandwidth required. Circuit switched, streaming

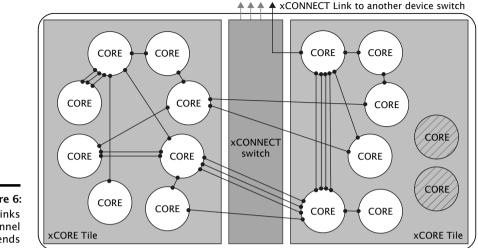


Figure 6: Switch, links and channel ends

and packet switched data can both be supported efficiently. Streams provide the fastest possible data rates between xCORE Tiles (up to 250 MBit/s), but each stream requires a single link to be reserved between switches on two tiles. All packet communications can be multiplexed onto a single link.

Information on the supported routing topologies that can be used to connect multiple devices together can be found in the XS1-UF Link Performance and Design Guide, X2999.

# 7 PLL

The PLL creates a high-speed clock that is used for the switch, tile, and reference clock. The initial PLL multiplication value is shown in Figure 7:

Figure 7: The initial PLL multiplier values

7: 	Oscillator	Tile Boot	PLL Ratio	PLL settings					
er	Frequency	Frequency		OD	F	R			
es	9-25 MHz	144-400 MHz	16	1	63	0			

Figure 7 also lists the values of OD, F and R, which are the registers that define the ratio of the tile frequency to the oscillator frequency:

$$F_{core} = F_{osc} \times \frac{F+1}{2} \times \frac{1}{R+1} \times \frac{1}{OD+1}$$

*OD*, *F* and *R* must be chosen so that  $0 \le R \le 63$ ,  $0 \le F \le 4095$ ,  $0 \le OD \le 7$ , and  $260MHz \le F_{osc} \times \frac{F+1}{2} \times \frac{1}{R+1} \le 1.3GHz$ . The *OD*, *F*, and *R* values can be modified by writing to the digital node PLL configuration register.


If the USB PHY is used, then either a 24 MHz or 12 MHz oscillator must be used.

If a different tile frequency is required (eg, 500 MHz), then the PLL must be reprogrammed after boot to provide the required tile frequency. The XMOS tools perform this operation by default. Further details on configuring the clock can be found in the xCORE-200 Clock Frequency Control document.

## 8 Boot Procedure

The device is kept in reset by driving RST\_N low. When in reset, all GPIO pins have a pull-down enabled. The processor must be held in reset until VDDIOL is in spec for at least 1 ms. When the device is taken out of reset by releasing RST\_N the processor starts its internal reset process. After 15-150  $\mu$ s (depending on the input clock) the processor boots.

The device boots from a QSPI flash (IS25LQ016B) that is embedded in the device. The QSPI flash is connected to the ports on Tile 0 as shown in Figure 8. An external 1K resistor must connect X0D01 to VDDIOL. X0D10 should ideally not be connected. If X0D10 is connected, then a 150 ohm series resistor close to the device is recommended. X0D04..X0D07 should be not connected.

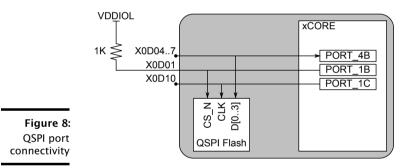


The xCORE Tile boot procedure is illustrated in Figure 9. If bit 5 of the security register (*see*  $\S$ 9.1) is set, the device boots from OTP. Otherwise, the device boots from the internal flash.

The boot image has the following format:

- ► A 32-bit program size *s* in words.
- Program consisting of  $s \times 4$  bytes.
- A 32-bit CRC, or the value 0x0D15AB1E to indicate that no CRC check should be performed.

The program size and CRC are stored least significant byte first. The program is loaded into the lowest memory address of RAM, and the program is started from that address. The CRC is calculated over the byte stream represented by the program size and the program itself. The polynomial used is 0xEDB88320 (IEEE

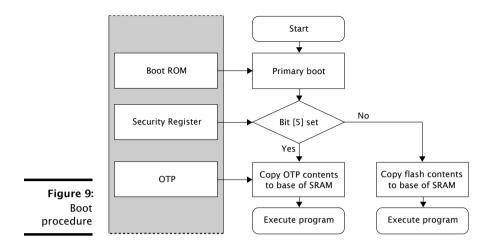

### 8.1 Security register

The security register enables security features on the xCORE tile. The features shown in Figure 10 provide a strong level of protection and are sufficient for providing strong IP security.

## 9 Memory

#### 9.1 OTP

Each xCORE Tile integrates 8 KB one-time programmable (OTP) memory along with a security register that configures system wide security features. The OTP holds data in four sectors each containing 512 rows of 32 bits which can be used to implement secure bootloaders and store encryption keys. Data for the security register is loaded from the OTP on power up. All additional data in OTP is copied from the OTP to SRAM and executed first on the processor.

The OTP memory is programmed using three special I/O ports: the OTP address port is a 16-bit port with resource ID 0x100200, the OTP data is written via a 32-bit port with resource ID 0x200100, and the OTP control is on a 16-bit port with ID 0x100300. Programming is performed through libotp and xburn.

## 9.2 SRAM

Each xCORE Tile integrates a single 256KBSRAM bank for both instructions and data. All internal memory is 32 bits wide, and instructions are either 16-bit or 32-bit. Byte (8-bit), half-word (16-bit) or word (32-bit) accesses are supported and



Feature	Bit	Description
Disable JTAG	0	The JTAG interface is disabled, making it impossible for the tile state or memory content to be accessed via the JTAG interface.
Disable Link access 1 Secure Boot 5 Redundant rows 7 Sector Lock 0 8		Other tiles are forbidden access to the processor state via the system switch. Disabling both JTAG and Link access transforms an xCORE Tile into a "secure island" with other tiles free for non-secure user application code.
Secure Boot	5	The xCORE Tile is forced to boot from address 0 of the OTP, allowing the xCORE Tile boot ROM to be bypassed ( <i>see</i> §8).
Redundant rows	7	Enables redundant rows in OTP.
Sector Lock 0	8	Disable programming of OTP sector 0.
Sector Lock 1	9	Disable programming of OTP sector 1.
Sector Lock 2	10	Disable programming of OTP sector 2.
Sector Lock 3	11	Disable programming of OTP sector 3.
OTP Master Lock	12	Disable OTP programming completely: disables updates to all sectors and security register.
Disable JTAG-OTP	13	Disable all (read & write) access from the JTAG interface to this OTP.
	2115	General purpose software accessable security register available to end-users.
	3122	General purpose user programmable JTAG UserID code extension.

Figure 10: Security register features


are executed within one tile clock cycle. There is no dedicated external memory interface, although data memory can be expanded through appropriate use of the ports.

## 10 USB PHY

The USB PHY provides High-Speed and Full-Speed, device, host, and on-the-go functionality. The PHY is configured through a set of peripheral registers (Appendix F), and data is communicated through ports on the digital node. A library, XUD, is provided to implement *USB-device* functionality.

The USB PHY is connected to the ports on Tile 0 and Tile 1 as shown in Figure 11. When the USB PHY is enabled on Tile 0, the ports shown can on Tile 0 only be used with the USB PHY. When the USB PHY is enabled on Tile 1, then the ports shown can on Tile 1 only be used with the USB PHY. All other IO pins and ports are unaffected. The USB PHY should not be enabled on both tiles. Two clock blocks can be used to clock the USB ports. One clock block for the TXDATA path, and one clock block for the RXDATA path. Details on how to connect those ports are documented in an application note on USB for xCORE-200.

 $\times MOS$ 

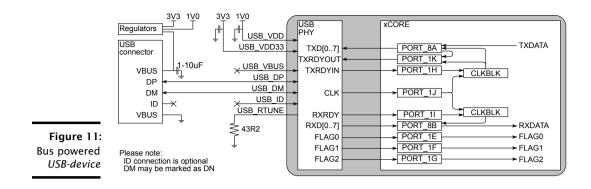

An external resistor of 43.2 ohm (1% tolerance) should connect USB\_RTUNE to ground, as close as possible to the device.

### 10.1 USB VBUS

USB\_VBUS need not be connected if the device is wholly powered by USB, and the device is used to implement a *USB-device*.

If you use the USB PHY to design a self-powered *USB-device*, then the device must be able detect the presence of VBus on the USB connector (so the device can disconnect its pull-up resistors from D+/D- to ensure the device does not have any voltage on the D+/D- pins when VBus is not present, "USB Back Voltage Test"). This requires USB\_VBUS to be connected to the VBUS pin of the USB connector as is shown in Figure 12.

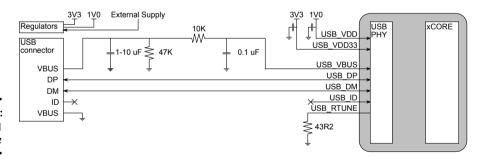


Figure 12: Self powered USB-device

When connecting a USB cable to the device it is possible an overvoltage transient will be present on VBus due to the inductance of the USB cable combined with the required input capacitor on VBus. The circuit in Figure 12 ensures that the transient does not damage the device. The 10k series resistor and 0.1 uF capacitor ensure than any input transient is filtered and does not reach the device. The 47k resistor to ground is a bleeder resistor to discharge the input capacitor when VBus is not present. The 1-10 uF input capacitor is required as part of the USB specification. A typical value would be 2.2 uF to ensure the 1 uF minimum requirement is met even under voltage bias conditions.

In any case, extra components (such as a ferrite bead and diodes) may be required for EMC compliance and ESD protection. Different wiring is required for USB-host and USB-OTG.


## 10.2 Logical Core Requirements

The XMOS XUD software component runs in a single logical core with endpoint and application cores communicating with it via a combination of channel communication and shared memory variables.

Each IN (host requests data from device) or OUT (data transferred from host to device) endpoint requires one logical core.

## 11 JTAG

The JTAG module can be used for loading programs, boundary scan testing, incircuit source-level debugging and programming the OTP memory.

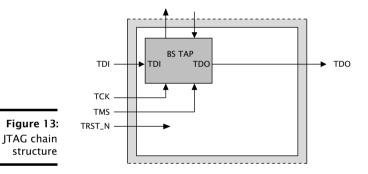

The JTAG chain structure is illustrated in Figure 13. It comprises a single 1149.1 compliant TAP that can be used for boundary scan of the I/O pins. It has a 4-bit IR and 32-bit DR. It also provides access to a chip TAP that in turn can access the xCORE Tile for loading code and debugging.

The TRST\_N pin must be asserted low during and after power up for 100 ns. If JTAG is not required, the TRST\_N pin can be tied to ground to hold the JTAG module in reset.

The JTAG device identification register can be read by using the IDCODE instruction. Its contents are specified in Figure 14.

Figure 14	Bit	Bit31 Device Identification Register																E	Bit0											
Figure 14:		Ver	sion			Part Number													Manufacturer Identity											1
IDCODE return value	0 0 0 0				0	0	0	0	0	0 0 0 0				0 0 0 0 0 1 1 0					0	0 1 1 0				0 0 1 1 0 0					1	1
Tetum value		(	2		0			0			0 6					6 3								3						

The JTAG usercode register can be read by using the USERCODE instruction. Its contents are specified in Figure 15. The OTP User ID field is read from bits [22:31] of the security register on xCORE Tile 0, *see* §9.1 (all zero on unprogrammed devices).

Figure 15: USERCODE return value

15.	Bit	31												ι	Jser	code	Reg	jiste	r												В	it0
15:				0	TP U	Jser	D					Unu	ised									Silio	on I	Revis	ion							
DDE llue	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
lue			0			0	)			(	)			ž	2			8	3			0	)			(	)			C	)	

## 12 Board Integration

The device has the following power supply pins:

- ▶ VDD pins for the xCORE Tile, including a USB\_VDD pin that powers the USB PHY
- VDDIO pins for the I/O lines. Separate I/O supplies are provided for the left, top, and right side of the package; different I/O voltages may be supplied on those. The signal description (Section 4) specifies which I/O is powered from which power-supply
- ▶ PLL\_AVDD pins for the PLL
- OTP\_VCC pins for the OTP
- ► A USB\_VDD33 pin for the analogue supply to the USB-PHY

Several pins of each type are provided to minimize the effect of inductance within the package, all of which must be connected. The power supplies must be brought up monotonically and input voltages must not exceed specification at any time.

The VDD supply must ramp from 0V to its final value within  $10 \, \text{ms}$  to ensure correct startup.

The VDDIO and OTP\_VCC supply must ramp to its final value before VDD reaches 0.4 V.

The PLL\_AVDD supply should be separated from the other noisier supplies on the board. The PLL requires a very clean power supply, and a low pass filter (for example, a  $4.7 \Omega$  resistor and 100 nF multi-layer ceramic capacitor) is recommended on this pin.

The following ground pins are provided:

- PLL\_AGND for PLL\_AVDD
- GND for all other supplies

All ground pins must be connected directly to the board ground.

The VDD and VDDIO supplies should be decoupled close to the chip by several 100 nF low inductance multi-layer ceramic capacitors between the supplies and GND



(for example, 100nF 0402 for each supply pin). The ground side of the decoupling capacitors should have as short a path back to the GND pins as possible. A bulk decoupling capacitor of at least 10 uF should be placed on each of these supplies.

RST\_N is an active-low asynchronous-assertion global reset signal. Following a reset, the PLL re-establishes lock after which the device boots up according to the boot mode (*see* §8). RST\_N and must be asserted low during and after power up for 100 ns.

## 12.1 USB connections


USB\_VBUS should be connected to the VBUS pin of the USB connector. A 2.2  $\mu$ F capacitor to ground is required on the VBUS pin. A ferrite bead may be used to reduce HF noise.

For self-powered systems, a bleeder resistor may be required to stop VBUS from floating when no USB cable is attached.

USB\_DP and USB\_DN should be connected to the USB connector. USB\_ID does not need to be connected.

## 12.2 USB signal routing and placement


The USB\_DP and USB\_DN lines are the positive and negative data polarities of a high speed USB signal respectively. Their high-speed differential nature implies that they must be coupled and properly isolated. The board design must ensure that the board traces for USB\_DP and USB\_DN are tightly matched. In addition, according to the USB 2.0 specification, the USB\_DP and USB\_DN differential impedance must be 90  $\Omega$ .

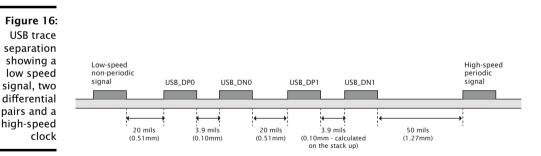

## 12.2.1 General routing and placement guidelines

The following guidelines will help to avoid signal quality and EMI problems on high speed USB designs. They relate to a four-layer (Signal, GND, Power, Signal) PCB.

For best results, most of the routing should be done on the top layer (assuming the USB connector and XVF3000/XVF3100-TQ128 are on the top layer) closest to

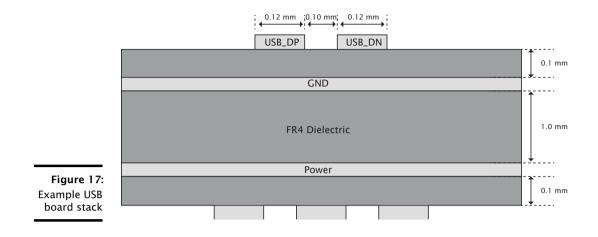

GND. Reference planes should be below the transmission lines in order to maintain control of the trace impedance.

We recommend that the high-speed clock and high-speed USB differential pairs are routed first before any other routing. When routing high speed USB signals, the following guidelines should be followed:

- ▶ High speed differential pairs should be routed together.
- ▶ High-speed USB signal pair traces should be trace-length matched. Maximum trace-length mismatch should be no greater than 4mm.
- ▶ Ensure that high speed signals (clocks, USB differential pairs) are routed as far away from off-board connectors as possible.
- ▶ High-speed clock and periodic signal traces that run parallel should be at least 1.27mm away from USB\_DP/USB\_DN (see Figure 16).
- Low-speed and non-periodic signal traces that run parallel should be at least 0.5mm away from USB\_DP/USB\_DN (see Figure 16).
- ▶ Route high speed USB signals on the top of the PCB wherever possible.
- Route high speed USB traces over continuous power planes, with no breaks. If a trade-off must be made, changing signal layers is preferable to crossing plane splits.
- Follow the  $20 \times h$  rule; keep traces  $20 \times h$  (the height above the power plane) away from the edge of the power plane.
- ▶ Use a minimum of vias in high speed USB traces.
- Avoid corners in the trace. Where necessary, rather than turning through a 90 degree angle, use two 45 degree turns or an arc.



- DO NOT route USB traces near clock sources, clocked circuits or magnetic devices.
- Avoid stubs on high speed USB signals.

### 12.3 Land patterns and solder stencils

The package is a 128 pin Thin Quad Flat Package (TQFP) with exposed ground paddle/heat slug on a 0.4mm pitch.

The land patterns and solder stencils will depend on the PCB manufacturing process. We recommend you design them with using the IPC specifications *"Generic Requirements for Surface Mount Design and Land Pattern Standards"* IPC-7351B. This standard aims to achieve desired targets of heel, toe and side fillets for solder-joints. The mechanical drawings in Section 14 specify the dimensions and tolerances.

### 12.4 Ground and Thermal Vias

Vias under the heat slug into the ground plane of the PCB are recommended for a low inductance ground connection and good thermal performance. Typical designs could use 16 vias in a 4  $\times$  4 grid, equally spaced across the heat slug.

### 12.5 Moisture Sensitivity

XMOS devices are, like all semiconductor devices, susceptible to moisture absorption. When removed from the sealed packaging, the devices slowly absorb moisture from the surrounding environment. If the level of moisture present in the device is too high during reflow, damage can occur due to the increased internal vapour pressure of moisture. Example damage can include bond wire damage, die lifting, internal or external package cracks and/or delamination.

All XMOS devices are Moisture Sensitivity Level (MSL) 3 - devices have a shelf life of 168 hours between removal from the packaging and reflow, provided they are stored below 30C and 60% RH. If devices have exceeded these values or an included moisture indicator card shows excessive levels of moisture, then the parts should be baked as appropriate before use. This is based on information from *Joint IPC/JEDEC Standard For Moisture/Reflow Sensitivity Classification For Nonhermetic Solid State Surface-Mount Devices* J-STD-020 Revision E.

-XM()S

# **13 Electrical Characteristics**

## 13.1 Absolute Maximum Ratings

Stresses beyond those listed under Absolute Maximum Ratings may cause permanent damage to the device. Exposure to any Absolute Maximum Rating condition for extended periods may affect device reliability and lifetime.

Symbol	Parameter	MIN	MAX	UNITS	Notes
VDD	Tile DC supply voltage	-0.2	1.1	V	
PLL_AVDD	PLL analog supply	-0.2	1.1	V	
VDDIO I/O supply voltage		-0.3	3.75	V	
OTP_VCC	OTP supply voltage	-0.3	3.75	V	
Tj	Junction temperature		125	°C	
Tstg	Storage temperature	-65	150	°C	
V(Vin)	Voltage applied to any IO pin	-0.3	3.75	V	
I(XxDxx)	GPIO current	-30	30	mA	
V(X0D03-8)	Voltage applied to flash pins	-0.3	VDDIO+0.5	V	
I(VDDIOL)	Current for VDDIOL domain		490	mA	A, B, C
I(VDDIOR)	Current for VDDIOR domain		490	mA	A, B, C
I(VDDIOT)	Current for VDDIOT domain		98	mA	A, C
USB_VDD	USB tile DC supply voltage	-0.2	1.1	V	
USB_VDD33	USB tile analog supply voltage	-0.3	3.75	V	
USB_VBUS	USB VBUS voltage	-0.3	5.75	V	
USB_DP	USB DP voltage	-0.3	5.5	V	
USB_DM	USB DM voltage	-0.3	5.5	V	
USB_ID	USB ID voltage	-0.3	2.75	V	

Figure 18: Absolute maximum ratings

A Exceeding these current limits will result in premature aging and reduced lifetime.

-XMOS

B This current consumption must be evenly distributed over all VDDIO pins.

C All main power (VDD, VDDIO) and ground (VSS) pins must always be connected to the external power supply, in the permitted range.

Symbol	Parameter	MIN	TYP	MAX	UNITS	Notes
VDD	Tile DC supply voltage	0.95	1.00	1.05	V	
VDDIOL	I/O supply voltage	3.135	3.30	3.465	V	
VDDIOR	I/O supply voltage	3.135	3.30	3.465	V	
VDDIOT 3v3	I/O supply voltage	3.135	3.30	3.465	V	
VDDIOT 2v5	I/O supply voltage	2.375	2.50	2.625	V	
USB_VDD	USB tile DC supply voltage	0.95	1.00	1.05	V	
VDD33	Peripheral supply	3.135	3.30	3.465	V	
PLL_AVDD	PLL analog supply	0.95	1.00	1.05	V	
CI	xCORE Tile I/O load capacitance			25	pF	
Та	Ambient operating temperature	0		70	°C	
Тј	Junction temperature			125	°C	

### 13.2 Operating Conditions

Figure 19: Operating conditions

## 13.3 DC Characteristics, VDDIO=3V3

Symbol	Parameter	MIN	TYP	MAX	UNITS	Notes
V(IH)	Input high voltage	2.00		3.60	V	А
V(IL)	Input low voltage	-0.30		0.70	V	А
V(OH)	Output high voltage	2.20			V	В, С
V(OL)	Output low voltage			0.40	V	В, С
I(PU)	Internal pull-up current (Vin=0V)	-100			μA	D
I(PD)	Internal pull-down current (Vin=3.3V)			100	μA	D
I(LC)	Input leakage current	-10		10	μA	

Figure 20: DC characteristics

A All pins except power supply pins.


B Pins X1D40, X1D41, X1D42, X1D43, X1D26, and X1D27 are nominal 8 mA drivers, the remainder of the general-purpose I/Os are 4 mA.


C Measured with 4 mA drivers sourcing 4 mA, 8 mA drivers sourcing 8 mA.

XMOS

D Used to guarantee logic state for an I/O when high impedance. The internal pull-ups/pull-downs should not be used to pull external circuitry. In order to pull the pin to the opposite state, a 4K7 resistor is recommended to overome the internal pull current.

Figure 21: Typical internal pull-down and pull-up currents

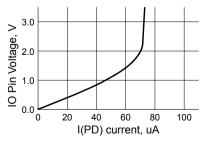

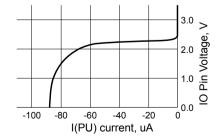

## 13.4 ESD Stress Voltage

Figure 22:	Symbol	Parameter	MIN	ТҮР	MAX	UNITS	Notes
ESD stress	HBM	Human body model	-2.00		2.00	KV	
voltage	CDM	Charged Device Model	-500		500	V	

### 13.5 Reset Timing

#### Figure 23: Reset timing

	Symbol	Parameters	MIN	TYP	MAX	UNITS	Notes
23:	T(RST)	Reset pulse width	5			μs	
ng	T(INIT)	Initialization time			150	μs	А

A Shows the time taken to start booting after RST\_N has gone high.

## **13.6** Power Consumption

	Symbol	Parameter	MIN	TYP	MAX	UNITS	Notes
	I(DDCQ)	Quiescent VDD current		45		mA	A, B, C
	PD	Tile power dissipation		325		µW/MIPS	A, D, E, F
-	IDD	Active VDD current		580	700	mA	A, G
4:	I(ADDPLL)	PLL_AVDD current		5	7	mA	Н
e	I(VDD33)	VDD33 current		26.7		mA	I
S	I(USB_VDD)	USB_VDD current		8.27		mA	J

Figure 24 xCORE Tile currents

A Use for budgetary purposes only.

- B Assumes typical tile and I/O voltages with no switching activity.
- C Includes PLL current.
- D Assumes typical tile and I/O voltages with nominal switching activity.
- E Assumes 1 MHz = 1 MIPS.
- F PD(TYP) value is the usage power consumption under typical operating conditions.

-XM()S

- G Measurement conditions: VDD = 1.0 V, VDDIO = 3.3 V, 25 °C, 600 MHz, average device resource usage.
- H PLL\_AVDD = 1.0 V
- I HS mode transmitting while driving all 0's data (constant JKJK on DP/DM). Loading of 10 pF. Transfers do not include any interpacket delay.
- J HS receive mode; no traffic.



The tile power consumption of the device is highly application dependent and should be used for budgetary purposes only.

More detailed power analysis can be found in the XS1-UF Power Consumption document,



### 13.7 Clock

Figure 25: Clock

Symbol	Parameter	MIN	TYP	MAX	UNITS	Notes
f	Frequency	9	24	25	MHz	
SR	Slew rate	0.10			V/ns	
TJ(LT)	Long term jitter (pk-pk)			2	%	A
f(MAX)	Processor clock frequency			600	MHz	В

A Percentage of CLK period.

B Assumes typical tile and I/O voltages with nominal activity.

Further details can be found in the XS1-UF Clock Frequency Control document,

### 13.8 xCORE Tile I/O AC Characteristics

Figure 26: I/O AC characteristics

Symbol	Parameter	MIN	TYP	MAX	UNITS	Notes
T(XOVALID)	Input data valid window	8			ns	
T(XOINVALID)	Output data invalid window	9			ns	
T(XIFMAX)	Rate at which data can be sampled with respect to an external clock			60	MHz	

The input valid window parameter relates to the capability of the device to capture data input to the chip with respect to an external clock source. It is calculated as the sum of the input setup time and input hold time with respect to the external clock as measured at the pins. The output invalid window specifies the time for which an output is invalid with respect to the external clock. Note that these parameters are specified as a window rather than absolute numbers since the device provides functionality to delay the incoming clock with respect to the incoming data.

Information on interfacing to high-speed synchronous interfaces can be found in the Port I/O Timing document, X5821.

MIN

TYP

MAX

87

217

100

UNITS

MBit/s

MBit/s

MBit/s

Notes

A, B

A, B

В

В

## 13.9 xConnect Link Performance

2b link bandwidth (packetized)

5b link bandwidth (packetized)

2b link bandwidth (streaming)

Parameter

Figure 27:
Link
performance

B(5blinkS) 5b link bandwidth (streaming) 250 MBit/s A Assumes 32-byte packet in 3-byte header mode. Actual performance depends on size of the header and payload.

B 7.5 ns symbol time.

Symbol

B(2blinkP)

B(5blinkP)

B(2blinkS)

The asynchronous nature of links means that the relative phasing of CLK clocks is not important in a multi-clock system, providing each meets the required stability criteria.

-XM()S

	Symbol	Parameter	MIN	ТҮР	MAX	UNITS	Notes
	f(TCK_D)	TCK frequency (debug)			18	MHz	
	f(TCK_B)	TCK frequency (boundary scan)			10	MHz	
-	T(SETUP)	TDO to TCK setup time	5			ns	A
3:	T(HOLD)	TDO to TCK hold time	5			ns	А
9	T(DELAY)	TCK to output delay			15	ns	В

## 13.10 JTAG Timing

Figure 28: JTAG timing


A Timing applies to TMS and TDI inputs.

B Timing applies to TDO output from negative edge of TCK.

All JTAG operations are synchronous to TCK apart from the global asynchronous reset TRST\_N.

-XMOS

# 14 Package Information

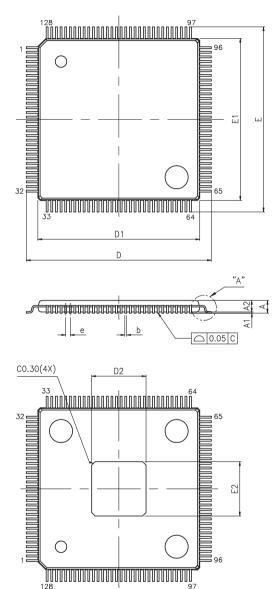

(THERMALLY ENHANCED VARIATIONS ONLY)

VARIATIONS (A	ALL DIMENS	SIONS SHO	WN IN MM)					
SYMBOLS	MIN.	NOM.	MAX.					
A			1.20					
A1	0.05		0.15					
A2	0.95	1.00	1.05					
b	0.13	0.16	0.23					
с	0.09	0.127	0.16					
D	1	6.00 BS	С					
D1	1	4.00 BS	С					
E	1	6.00 BS	С					
E1	1	4.00 BS	С					
е		0.40 BS	С					
L	0.45	0.58	0.75					
L1	1.00 REF							
θ	0'	3.5°	7*					

#### THERMALLY ENHANCED DIMENSIONS(SHOWN IN MM)

			•			
	D2		E2			
PAD SIZE	MIN.	NOM.	MAX.	MIN.	NOM.	MAX.
196X196	4.40	4.70	5.00	4.40	4.70	5.00
	PAD SIZE 196X196	MIN.	PAD SIZE MIN. NOM.	PAD SIZE MIN. NOM. MAX.	PAD SIZE MIN. NOM. MAX. MIN.	PAD SIZE MIN. NOM. MAX. MIN. NOM.


TEC:
ILJ.

-XMOS


с

1.JEDEC OUTLINE:N/A.

- 2.DATUM PLANE H IS LOCATED AT THE BOTTOM OF THE MOLD PARTING LINE COINCIDENT WITH WHERE THE LEAD EXITS THE BODY.
- 3.DIMENSIONS D1 AND E1 D0 NOT INCLUDE MOLD PROTRUSION. ALLOWABLE PROTRUSION IS 0.25 mm PER SIDE. DIMENSIONS D1 AND E1 D0 INCLUDE MOLD MISMATCH AND ARE DETERMINED AT DATUM PLANE
- 4.DIMENSION b DOES NOT INCLUDE DAMBAR PROTRUSION.



## 14.1 Part Marking

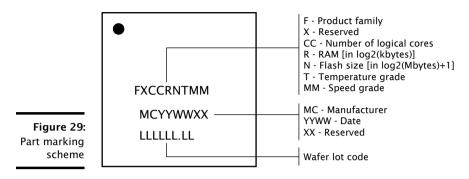

# 15 Ordering Information

	Product Code	DSP Features	Marking	Qualification
	XVF3000-TQ128-C	Includes XMOS Voice DSP	VSM01C	Commercial
Figure 30: Orderable part numbers	XVF3100-TQ128-C	Includes XMOS Voice DSP and Sensory TrulyHandsfree Tech- nology	VSM02C	Commercial

-XMOS

# Appendices

# A Configuration of the XVF3000/XVF3100-TQ128

XTIME PLL Hardware response ports **xCORE** lo YCORE ical core xCORE Io ical core configuration status configuration configuration status XCORE IO gical core FLASH xCORE loo aical core Processor Proces sor xCORE loo XCOR gical core core xCORE loo Node XCOF gical core Lile Tile xCORE lo core XCOF gical core **XCORE IO** core XCOR gical core USB SRAM OTP OTP SRAM config

The device is configured through banks of registers, as shown in Figure 31.

Figure 31: Registers

> The following communication sequences specify how to access those registers. Any messages transmitted contain the most significant 24 bits of the channel-end to which a response is to be sent. This comprises the node-identifier and the channel number within the node. if no response is required on a write operation, supply 24-bits with the last 8-bits set, which suppresses the reply message. Any multi-byte data is sent most significant byte first.

## A.1 Accessing a processor status register

The processor status registers are accessed directly from the processor instruction set. The instructions GETPS and SETPS read and write a word. The register number should be translated into a processor-status resource identifier by shifting the register number left 8 places, and ORing it with 0x0B. Alternatively, the functions getps(reg) and setps(reg,value) can be used from XC.

## A.2 Accessing an xCORE Tile configuration register

xCORE Tile configuration registers can be accessed through the interconnect using the functions write\_tile\_config\_reg(tileref, ...) and read\_tile\_config\_reg(tile  $\rightarrow$  ref, ...), where tileref is the name of the xCORE Tile, e.g. tile[1]. These functions implement the protocols described below.

Instead of using the functions above, a channel-end can be allocated to communicate with the xCORE tile configuration registers. The destination of the channel-end should be set to 0xnnnnC20C where nnnnnn is the tile-identifier.

A write message comprises the following:

control-token	24-bit response	16-bit	32-bit	control-token
192	channel-end identifier	register number	data	1

The response to a write message comprises either control tokens 3 and 1 (for success), or control tokens 4 and 1 (for failure).

A read message comprises the following:

control-token	24-bit response	16-bit	control-token
193	channel-end identifier	register number	1

The response to the read message comprises either control token 3, 32-bit of data, and control-token 1 (for success), or control tokens 4 and 1 (for failure).

### A.3 Accessing node configuration

Node configuration registers can be accessed through the interconnect using the functions write\_node\_config\_reg(device, ...) and read\_node\_config\_reg(device,  $\rightarrow$  ...), where device is the name of the node. These functions implement the protocols described below.

Instead of using the functions above, a channel-end can be allocated to communicate with the node configuration registers. The destination of the channel-end should be set to 0xnnnnC30C where nnnn is the node-identifier.

A write message comprises the following:

 control-token
 24-bit response
 16-bit
 32-bit
 control-token

 192
 channel-end identifier
 register number
 data
 1

The response to a write message comprises either control tokens 3 and 1 (for success), or control tokens 4 and 1 (for failure).

A read message comprises the following:

control-token	24-bit response	16-bit	control-token
193	channel-end identifier	register number	1

The response to a read message comprises either control token 3, 32-bit of data, and control-token 1 (for success), or control tokens 4 and 1 (for failure).

## A.4 Accessing a register of an analogue peripheral

Peripheral registers can be accessed through the interconnect using the functions write\_periph\_32(device, peripheral, ...), read\_periph\_32(device, peripheral, ...)  $\leftrightarrow$ , write\_periph\_8(device, peripheral, ...), and read\_periph\_8(device, peripheral  $\leftrightarrow$ , ...); where device is the name of the analogue device, and peripheral is the number of the peripheral. These functions implement the protocols described below.

A channel-end should be allocated to communicate with the configuration registers. The destination of the channel-end should be set to 0xnnnnpp02 where nnnn is the node-identifier and pp is the peripheral identifier.

A write message comprises the following:

control-token	24-bit response	8-bit	8-bit	data	control-token
36	channel-end identifier	register number	size		1

The response to a write message comprises either control tokens 3 and 1 (for success), or control tokens 4 and 1 (for failure).

A read message comprises the following:

control-token	24-bit response	8-bit	8-bit	control-token
37	channel-end identifier	register number	size	1

-XMOS

The response to the read message comprises either control token 3, data, and control-token 1 (for success), or control tokens 4 and 1 (for failure).

# **B** Processor Status Configuration

The processor status control registers can be accessed directly by the processor using processor status reads and writes (use getps(reg) and setps(reg,value) for reads and writes).

Number	Perm	Description
0x00	RW	RAM base address
0x01	RW	Vector base address
0x02	RW	xCORE Tile control
0x03	RO	xCORE Tile boot status
0x05	RW	Security configuration
0x06	RW	Ring Oscillator Control
0x07	RO	Ring Oscillator Value
0x08	RO	Ring Oscillator Value
0x09	RO	Ring Oscillator Value
0x0A	RO	Ring Oscillator Value
0x0C	RO	RAM size
0x10	DRW	Debug SSR
0x11	DRW	Debug SPC
0x12	DRW	Debug SSP
0x13	DRW	DGETREG operand 1
0x14	DRW	DGETREG operand 2
0x15	DRW	Debug interrupt type
0x16	DRW	Debug interrupt data
0x18	DRW	Debug core control
0x20 0x27	DRW	Debug scratch
0x30 0x33	DRW	Instruction breakpoint address
0x40 0x43	DRW	Instruction breakpoint control
0x50 0x53	DRW	Data watchpoint address 1
0x60 0x63	DRW	Data watchpoint address 2
0x70 0x73	DRW	Data breakpoint control register
0x80 0x83	DRW	Resources breakpoint mask
0x90 0x93	DRW	Resources breakpoint value
0x9C 0x9F	DRW	Resources breakpoint control register

-XMOS°

Figure 32:

Summary

35

#### B.1 RAM base address: 0x00

This register contains the base address of the RAM. It is initialized to 0x00040000.

**0x00:** RAM base address

00:	Bits	Perm	Init	Description
se	31:2	RW		Most significant 16 bits of all addresses.
ss	1:0	RO	-	Reserved

#### B.2 Vector base address: 0x01

Base address of event vectors in each resource. On an interrupt or event, the 16 most significant bits of the destination address are provided by this register; the least significant 16 bits come from the event vector.

0x01: Vector base address

	Bits	Perm	Init	Description
e.	31:18	RW		The event and interrupt vectors.
s	17:0	RO	-	Reserved

-XMOS

#### **B.3** xCORE Tile control: 0x02

Register to control features in the xCORE tile

Bits	Perm	Init	Description
31:26	RO	-	Reserved
25:18	RW	0	RGMII TX data delay value (in PLL output cycle increments)
17:9	RW	0	RGMII TX clock divider value. TX clk rises when counter (clocked by PLL output) reaches this value and falls when counter reaches (value»1). Value programmed into this field should be actual divide value required minus 1
8	RW	0	Enable RGMII interface periph ports
7:6	RO	-	Reserved
5	RW	0	Select the dynamic mode (1) for the clock divider when the clock divider is enabled. In dynamic mode the clock divider is only activated when all active threads are paused. In static mode the clock divider is always enabled.
4	RW	0	Enable the clock divider. This divides the output of the PLL to facilitate one of the low power modes.
3	RO	-	Reserved
2	RW		Select between UTMI (1) and ULPI (0) mode.
1	RW		Enable the ULPI Hardware support module
0	RO	-	Reserved

0x02: xCORE Tile control

### B.4 xCORE Tile boot status: 0x03

This read-only register describes the boot status of the xCORE tile.

-XMOS<sup>®</sup>

Bits	Perm	Init	Description
31:24	RO	-	Reserved
23:16	RO		Processor number.
15:9	RO	-	Reserved
8	RO		Overwrite BOOT_MODE.
7:6	RO	-	Reserved
5	RO		Indicates if core1 has been powered off
4	RO		Cause the ROM to not poll the OTP for correct read levels
3	RO		Boot ROM boots from RAM
2	RO		Boot ROM boots from JTAG
1:0	RO		The boot PLL mode pin value.

0x03: xCORE Tile boot status

#### **B.5** Security configuration: 0x05

Bits	Perm	Init	Description
31	RW		Disables write permission on this register
30:15	RO	-	Reserved
14	RW		Disable access to XCore's global debug
13	RO	-	Reserved
12	RW		lock all OTP sectors
11:8	RW		lock bit for each OTP sector
7	RW		Enable OTP reduanacy
6	RO	-	Reserved
5	RW		Override boot mode and read boot image from OTP
4	RW		Disable JTAG access to the PLL/BOOT configuration registers
3:1	RO	-	Reserved
0	RW		Disable access to XCore's JTAG debug TAP

Copy of the security register as read from OTP.

0x05: Security configuration

### B.6 Ring Oscillator Control: 0x06

There are four free-running oscillators that clock four counters. The oscillators can be started and stopped using this register. The counters should only be read when the ring oscillator has been stopped for at least 10 core clock cycles (this can be achieved by inserting two nop instructions between the SETPS and GETPS). The counter values can be read using four subsequent registers. The ring oscillators are asynchronous to the xCORE tile clock and can be used as a source of random bits.

**0x06:** Ring Oscillator Control

Bits	Perm	Init	Description
31:2	RO	-	Reserved
1	RW	0	Core ring oscillator enable.
0	RW	0	Peripheral ring oscillator enable.

### B.7 Ring Oscillator Value: 0x07

This register contains the current count of the xCORE Tile Cell ring oscillator. This value is not reset on a system reset.

-XMOS

0x07: Ring	Bits	Perm	Init	Description
Oscillator	31:16	RO	-	Reserved
Value	15:0	RO	0	Ring oscillator Counter data.

#### B.8 Ring Oscillator Value: 0x08

This register contains the current count of the xCORE Tile Wire ring oscillator. This value is not reset on a system reset.

**0x08** Ring Oscillator Value

<b>08:</b> ing	Bits	Perm	Init	Description
tor	31:16	RO	-	Reserved
lue	15:0	RO	0	Ring oscillator Counter data.

#### B.9 Ring Oscillator Value: 0x09

This register contains the current count of the Peripheral Cell ring oscillator. This value is not reset on a system reset.

**0x09:** Ring Oscillator Value

Bits	Perm	Init	Description
31:16	RO	-	Reserved
15:0	RO	0	Ring oscillator Counter data.

#### B.10 Ring Oscillator Value: 0x0A

This register contains the current count of the Peripheral Wire ring oscillator. This value is not reset on a system reset.

**0x0A:** Ring Oscillator Value

<b>\:</b>	Bits	Perm	Init	Description
y r	31:16	RO	-	Reserved
e	15:0	RO	0	Ring oscillator Counter data.

XMOS

#### B.11 RAM size: 0x0C

The size of the RAM in bytes



0	x0C
RAM	size

	Bits	Perm	Init	Description
0x0C:	31:2	RO		Most significant 16 bits of all addresses.
size	1:0	RO	-	Reserved

#### B.12 Debug SSR: 0x10

This register contains the value of the SSR register when the debugger was called.

Bits	Perm	Init	Description	
31:11	RO	-	Reserved	
10	DRW		Address space indentifier	
9	DRW		Determines the issue mode (DI bit) upon Kernel Entry after Exception or Interrupt.	
8	RO		Determines the issue mode (DI bit).	
7	DRW		When 1 the thread is in fast mode and will continually issue.	
6	DRW		When 1 the thread is paused waiting for events, a lock or another resource.	
5	RO	-	Reserved	
4	DRW		1 when in kernel mode.	
3	DRW		1 when in an interrupt handler.	
2	DRW		1 when in an event enabling sequence.	
1	DRW		When 1 interrupts are enabled for the thread.	
0	DRW		When 1 events are enabled for the thread.	

**0x10:** Debug SSR

### B.13 Debug SPC: 0x11

This register contains the value of the SPC register when the debugger was called.

0x11:	Bits	Perm	Init	Description
Debug SPC	31:0	DRW		Value.

-XMOS<sup>®</sup>-

### B.14 Debug SSP: 0x12

This register contains the value of the SSP register when the debugger was called.

0x12:	Bits	Perm	Init	Description
Debug SSP	31:0	DRW		Value.

#### **B.15 DGETREG operand 1: 0x13**

The resource ID of the logical core whose state is to be read.

0x13:	Bits	Perm	Init	Description
DGETREG	31:8	RO	-	Reserved
operand 1	7:0	DRW		Thread number to be read

#### B.16 DGETREG operand 2: 0x14

Register number to be read by DGETREG

**0x14:** DGETREG operand 2

Bits	Perm	Init	Description	
31:5	RO	-	Reserved	
4:0	DRW		Register number to be read	

### B.17 Debug interrupt type: 0x15

Register that specifies what activated the debug interrupt.

Bits	Perm	Init	Description	
31:18	RO	-	Reserved	
17:16	DRW		Number of the hardware breakpoint/watchpoint which caused the interrupt (always 0 for =HOST= and =DCALL=). If multiple breakpoints/watchpoints trigger at once, the lowest number is taken.	
15:8	DRW		Number of thread which caused the debug interrupt (always 0 in the case of =HOST=).	
7:3	RO	-	Reserved	
2:0	DRW	0	Reserved Indicates the cause of the debug interrupt 1: Host initiated a debug interrupt through JTAG 2: Program executed a DCALL instruction 3: Instruction breakpoint 4: Data watch point 5: Resource watch point	

0x15: Debug interrupt type



#### **B.18** Debug interrupt data: 0x16

On a data watchpoint, this register contains the effective address of the memory operation that triggered the debugger. On a resource watchpoint, it countains the resource identifier.

**0x16:** Debug interrupt data

(16: bug	Bits	Perm	Init	Description
data	31:0	DRW		Value.

#### B.19 Debug core control: 0x18

This register enables the debugger to temporarily disable logical cores. When returning from the debug interrupts, the cores set in this register will not execute. This enables single stepping to be implemented.

0x18: Debug core control

Bits	Perm	Init	Description
31:8	RO	-	Reserved
7:0	DRW		1-hot vector defining which threads are stopped when not in debug mode. Every bit which is set prevents the respective thread from running.

#### B.20 Debug scratch: 0x20 .. 0x27

A set of registers used by the debug ROM to communicate with an external debugger, for example over JTAG. This is the same set of registers as the Debug Scratch registers in the xCORE tile configuration.

0x20 .. 0x27: Debug scratch

0x27: ebug	Bits	Perm	Init	Description
ratch	31:0	DRW		Value.

#### B.21 Instruction breakpoint address: 0x30 .. 0x33

-XM()S

This register contains the address of the instruction breakpoint. If the PC matches this address, then a debug interrupt will be taken. There are four instruction breakpoints that are controlled individually.

0x30 ... 0x33: Instruct breakp add

ction point	Bits	Perm	Init	Description
dress	31:0	DRW		Value.

#### B.22 Instruction breakpoint control: 0x40 .. 0x43

This register controls which logical cores may take an instruction breakpoint, and under which condition.

	Bits	Perm	Init	Description
	31:24	RO	-	Reserved
	23:16	DRW	0	A bit for each thread in the machine allowing the breakpoint to be enabled individually for each thread.
3:	15:2	RO	-	Reserved
n nt	1	DRW	0	When 0 break when PC == IBREAK_ADDR. When 1 = break when PC != IBREAK_ADDR.
ol	0	DRW	0	When 1 the instruction breakpoint is enabled.

0x40 .. 0x43 Instruction breakpoint contro

### B.23 Data watchpoint address 1: 0x50 .. 0x53

This set of registers contains the first address for the four data watchpoints.

<b>0x50 0x53:</b> Data				
watchpoint	Bits	Perm	Init	Description
address 1	31:0	DRW		Value.

### B.24 Data watchpoint address 2: 0x60 .. 0x63

This set of registers contains the second address for the four data watchpoints.

<b>0x60 0x63:</b> Data				
watchpoint	Bits	Perm	Init	Description
address 2	31:0	DRW		Value.

-XMOS

#### B.25 Data breakpoint control register: 0x70 ... 0x73

This set of registers controls each of the four data watchpoints.

	Bits	Perm	Init	Description
	31:24	RO	-	Reserved
	23:16	DRW	0	A bit for each thread in the machine allowing the breakpoint to be enabled individually for each thread.
0x70 0x73:	15:3	RO	-	Reserved
Data breakpoint	2	DRW	0	When 1 the breakpoints will be be triggered on loads.
control	1	DRW	0	Determines the break condition: $0 = A AND B$ , $1 = A OR B$ .
register	0	DRW	0	When 1 the instruction breakpoint is enabled.

#### B.26 Resources breakpoint mask: 0x80 .. 0x83

This set of registers contains the mask for the four resource watchpoints.

0x80 .. 0x83: Resou break

burces kpoint	Bits	Perm	Init	Description
mask	31:0	DRW		Value.

#### B.27 Resources breakpoint value: 0x90 .. 0x93

This set of registers contains the value for the four resource watchpoints.

0x90 .. 0x93: Resour breakpo va

irces point	Bits	Perm	Init	Description
alue	31:0	DRW		Value.

#### B.28 Resources breakpoint control register: 0x9C .. 0x9F

This set of registers controls each of the four resource watchpoints.

-XMOS

	Bits	Perm	Init	Description
	31:24	RO	-	Reserved
	23:16	DRW	0	A bit for each thread in the machine allowing the breakpoint to be enabled individually for each thread.
0x9C 0x9F: Resources	15:2	RO	-	Reserved
Resources breakpoint control	1	DRW	0	When 0 break when condition A is met. When 1 = break when condition B is met.
register	0	DRW	0	When 1 the instruction breakpoint is enabled.

-XMOS<sup>®</sup>-



# C Tile Configuration

The xCORE Tile control registers can be accessed using configuration reads and writes (use write\_tile\_config\_reg(tileref, ...) and read\_tile\_config\_reg(tileref,  $\rightarrow$  ...) for reads and writes).

Number	Perm	Description
0x00	CRO	Device identification
0x01	CRO	xCORE Tile description 1
0x02	CRO	xCORE Tile description 2
0x04	CRW	Control PSwitch permissions to debug registers
0x05	CRW	Cause debug interrupts
0x06	CRW	xCORE Tile clock divider
0x07	CRO	Security configuration
0x20 0x27	CRW	Debug scratch
0x40	CRO	PC of logical core 0
0x41	CRO	PC of logical core 1
0x42	CRO	PC of logical core 2
0x43	CRO	PC of logical core 3
0x44	CRO	PC of logical core 4
0x45	CRO	PC of logical core 5
0x46	CRO	PC of logical core 6
0x47	CRO	PC of logical core 7
0x60	CRO	SR of logical core 0
0x61	CRO	SR of logical core 1
0x62	CRO	SR of logical core 2
0x63	CRO	SR of logical core 3
0x64	CRO	SR of logical core 4
0x65	CRO	SR of logical core 5
0x66	CRO	SR of logical core 6
0x67	CRO	SR of logical core 7

Figure 33: Summary

### C.1 Device identification: 0x00

This register identifies the xCORE Tile



	Bits	Perm	Init	Description
	31:24	CRO		Processor ID of this XCore.
0x00:	23:16	CRO		Number of the node in which this XCore is located.
Device	15:8	CRO		XCore revision.
identification	7:0	CRO		XCore version.

#### C.2 xCORE Tile description 1: 0x01

This register describes the number of logical cores, synchronisers, locks and channel ends available on this xCORE tile.

Bits	Perm	Init	Description
31:24	CRO		Number of channel ends.
23:16	CRO		Number of the locks.
15:8	CRO		Number of synchronisers.
7:0	RO	-	Reserved

# C.3 xCORE Tile description 2: 0x02

This register describes the number of timers and clock blocks available on this xCORE tile.

0x( **xCORE T** description

0x01: xCORE Tile description 1

	Bits	Perm	Init	Description
x02:	31:16	RO	-	Reserved
Tile	15:8	CRO		Number of clock blocks.
on 2	7:0	CRO		Number of timers.

### C.4 Control PSwitch permissions to debug registers: 0x04

-XMOS

This register can be used to control whether the debug registers (marked with permission CRW) are accessible through the tile configuration registers. When this bit is set, write -access to those registers is disabled, preventing debugging of the xCORE tile over the interconnect.



0x04: Control PSwitch permissions to debug registers

Bits	Perm	Init	Description
31	CRW	0	When 1 the PSwitch is restricted to RO access to all CRW registers from SSwitch, XCore(PS_DBG_Scratch) and JTAG
30:1	RO	-	Reserved
0	CRW	0	When 1 the PSwitch is restricted to RO access to all CRW registers from SSwitch

### C.5 Cause debug interrupts: 0x05

This register can be used to raise a debug interrupt in this xCORE tile.

0x05: Cause debug interrupts

Bits	Perm	Init	Description
31:2	RO	-	Reserved
1	CRW	0	1 when the processor is in debug mode.
0	CRW	0	Request a debug interrupt on the processor.

### C.6 xCORE Tile clock divider: 0x06

This register contains the value used to divide the PLL clock to create the xCORE tile clock. The divider is enabled under control of the tile control register

0x06: xCORE Tile clock divider

E	Bits	Perm	Init	Description
	31	CRW	0	Clock disable. Writing '1' will remove the clock to the tile.
30	0:16	RO	-	Reserved
1	15:0	CRW	0	Clock divider.

### C.7 Security configuration: 0x07

Copy of the security register as read from OTP.

-XMOS

Bits	Perm	Init	Description
31	CRO		Disables write permission on this register
30:15	RO	-	Reserved
14	CRO		Disable access to XCore's global debug
13	RO	-	Reserved
12	CRO		lock all OTP sectors
11:8	CRO		lock bit for each OTP sector
7	CRO		Enable OTP reduanacy
6	RO	-	Reserved
5	CRO		Override boot mode and read boot image from OTP
4	CRO		Disable JTAG access to the PLL/BOOT configuration registers
3:1	RO	-	Reserved
0	CRO		Disable access to XCore's JTAG debug TAP

0x07: Security configuration

### C.8 Debug scratch: 0x20 .. 0x27

A set of registers used by the debug ROM to communicate with an external debugger, for example over the switch. This is the same set of registers as the Debug Scratch registers in the processor status.

0x20 .. 0x27: Debug scratch

0x27: ebug	Bits	Perm	Init	Description
ratch	31:0	CRW		Value.

### C.9 PC of logical core 0: 0x40

Value of the PC of logical core 0.

0x40 PC of logical core 0

<b>)x40:</b> gical	Bits	Perm	Init	Description
ore 0	31:0	CRO		Value.

-XMOS

### C.10 PC of logical core 1: 0x41

Value of the PC of logical core 1.



0x41: PC of logical core 1

l: al	Bits	Perm	Init	Description
1	31:0	CRO		Value.

### C.11 PC of logical core 2: 0x42

Value of the PC of logical core 2.

0x42: PC of logical core 2

Bits	Perm	Init	Description
31:0	CRO		Value.

### C.12 PC of logical core 3: 0x43

Value of the PC of logical core 3.

0x43:				
PC of logical	Bits	Perm	Init	Description
core 3	31:0	CRO		Value.

### C.13 PC of logical core 4: 0x44

Value of the PC of logical core 4.

**0x44** PC of logical core 4

<b>0x44:</b> ogical	Bits	Perm	Init	Description
core 4	31:0	CRO		Value.

### C.14 PC of logical core 5: 0x45

Value of the PC of logical core 5.

**0x45:** PC of logical core 5

Bits	Perm	Init	Description
31:0	CRO		Value.

•**X**M(

Bits

31:0

#### C.15 PC of logical core 6: 0x46

Value of the PC of logical core 6.

**0x46:** PC of logical core 6

 Perm
 Init
 Description

 CRO
 Value.

#### C.16 PC of logical core 7: 0x47

Value of the PC of logical core 7.

0x47 PC of logical core 7

0x47: ogical	Bits	Perm	Init	Description
ore 7	31:0	CRO		Value.

### C.17 SR of logical core 0: 0x60

Value of the SR of logical core 0

**0x60:** SR of logical core 0

<b>0x60:</b> ogical	Bits	Perm	Init	Description	
ore 0	31:0	CRO		Value.	

### C.18 SR of logical core 1: 0x61

Value of the SR of logical core 1

**0x61** SR of logical core 1

61: cal	Bits	Perm	Init	Description
e 1	31:0	CRO		Value.

-XMC

### C.19 SR of logical core 2: 0x62

Value of the SR of logical core 2



**0x62:** SR of logical core 2

<b>0x62:</b> ogical	Bits	Perm	Init	Description
core 2	31:0	CRO		Value.

### C.20 SR of logical core 3: 0x63

Value of the SR of logical core 3

0x63: SR of logical core 3

Bits	Perm	Init	Description
31:0	CRO		Value.

### C.21 SR of logical core 4: 0x64

Value of the SR of logical core 4

 
 Ox64: SR of logical core 4
 Bits
 Perm
 Init
 Description

 31:0
 CRO
 Value.

#### C.22 SR of logical core 5: 0x65

Value of the SR of logical core 5

**0x65** SR of logical core 5

<b>(65:</b> ical	Bits	Perm	Init	Description
	31:0	CRO		Value.

### C.23 SR of logical core 6: 0x66

Value of the SR of logical core 6

**0x66:** SR of logical core 6

Bits	Perm	Init	Description	
31:0	CRO		Value.	

 $\cdot X MOS$ 



### C.24 SR of logical core 7: 0x67

Value of the SR of logical core 7

0x67:				
SR of logical	Bits	Perm	Init	Description
core 7	31:0	CRO		Value.

# **D** Node Configuration

The digital node control registers can be accessed using configuration reads and writes (use write\_node\_config\_reg(device, ...) and read\_node\_config\_reg(device,  $\rightarrow$  ...) for reads and writes).

Number	Perm	Description
0x00	RO	Device identification
0x01	RO	System switch description
0x04	RW	Switch configuration
0x05	RW	Switch node identifier
0x06	RW	PLL settings
0x07	RW	System switch clock divider
0x08	RW	Reference clock
0x09	R	System JTAG device ID register
0x0A	R	System USERCODE register
0x0C	RW	Directions 0-7
0x0D	RW	Directions 8-15
0x10	RW	Reserved
0x11	RW	Reserved.
0x1F	RO	Debug source
0x20 0x28	RW	Link status, direction, and network
0x40 0x47	RO	PLink status and network
0x80 0x88	RW	Link configuration and initialization
0xA0 0xA7	RW	Static link configuration

Figure 34: Summary

### D.1 Device identification: 0x00

This register contains version and revision identifiers and the mode-pins as sampled at boot-time.

	Bits	Perm	Init	Description
	31:24	RO	-	Reserved
<b>0x00:</b> Device ification	23:16	RO		Sampled values of BootCtl pins on Power On Reset.
	15:8	RO		SSwitch revision.
	7:0	RO		SSwitch version.

-XMOS°

identif

### D.2 System switch description: 0x01

This register specifies the number of processors and links that are connected to this switch.

0x01 System switch description

	Bits	Perm	Init	Description
-	31:24	RO	-	Reserved
l: n	23:16	RO		Number of SLinks on the SSwitch.
h	15:8	RO		Number of processors on the SSwitch.
n	7:0	RO		Number of processors on the device.

#### D.3 Switch configuration: 0x04

This register enables the setting of two security modes (that disable updates to the PLL or any other registers) and the header-mode.

Bits	Perm	Init	Description
31	RW	0	0 = SSCTL registers have write access. $1 = SSCTL$ registers can not be written to.
30:9	RO	-	Reserved
8	RW	0	0 = PLL_CTL_REG has write access. 1 = PLL_CTL_REG can not be written to.
7:1	RO	-	Reserved
0	RW	0	0 = 2-byte headers, $1 = 1$ -byte headers (reset as 0).

**0x04:** Switch configuration

### D.4 Switch node identifier: 0x05

This register contains the node identifier.

	0x05
Switch	node
ider	ntifier

0x05:	Bits	Perm	Init	Description
node	31:16	RO	-	Reserved
ntifier	15:0	RW	0	The unique ID of this node.

### D.5 PLL settings: 0x06

An on-chip PLL multiplies the input clock up to a higher frequency clock, used to clock the I/O, processor, and switch, see Oscillator. Note: a write to this register will cause the tile to be reset.

·XM()S·

Bits	Perm	Init	Description
31	RW		If set to 1, the chip will not be reset
30	RW		If set to 1, the chip will not wait for the PLL to re-lock. Only use this if a gradual change is made to the PLL
29	DW		If set to 1, set the PLL to be bypassed
28	DW		If set to 1, set the boot mode to boot from JTAG
27:26	RO	-	Reserved
25:23	RW		Output divider value range from 0 (8'h0) to 7 (8'h7). OD value.
22:21	RO	-	Reserved
20:8	RW		Feedback multiplication ratio, range from 0 (8'h0) to 4095 (8'h3FF). F value.
7	RO	-	Reserved
6:0	RW		Oscilator input divider value range from 0 (8'h0) to 63 (8'h3F). R value.

0x06: PLL settings

### D.6 System switch clock divider: 0x07

Sets the ratio of the PLL clock and the switch clock.

**0x07:** System switch clock divider

Bits	Perm	Init	Description
31:16	RO	-	Reserved
15:0	RW	0	SSwitch clock generation

#### D.7 Reference clock: 0x08

Sets the ratio of the PLL clock and the reference clock used by the node.

0x08:	Bits	Perm	Init	Description
Reference	31:16	RO	-	Reserved
clock	15:0	RW	3	Software ref. clock divider

-XMOS

### D.8 System JTAG device ID register: 0x09

**0x09**: System JTAG device ID register

	Bits	Perm	Init	Description
-	31:28	RO		
9: G	27:12	RO		
D	11:1	RO		
er	0	RO		

#### D.9 System USERCODE register: 0x0A

**0x0A** System USERCODE register

<b>4:</b> n	Bits	Perm	Init	Description
E	31:18	RO		JTAG USERCODE value programmed into OTP SR
er	17:0	RO		metal fixable ID code

#### D.10 Directions 0-7: 0x0C

This register contains eight directions, for packets with a mismatch in bits 7..0 of the node-identifier. The direction in which a packet will be routed is goverened by the most significant mismatching bit.

Bits	Perm	Init	Description
31:28	RW	0	The direction for packets whose dimension is 7.
27:24	RW	0	The direction for packets whose dimension is 6.
23:20	RW	0	The direction for packets whose dimension is 5.
19:16	RW	0	The direction for packets whose dimension is 4.
15:12	RW	0	The direction for packets whose dimension is 3.
11:8	RW	0	The direction for packets whose dimension is 2.
7:4	RW	0	The direction for packets whose dimension is 1.
3:0	RW	0	The direction for packets whose dimension is 0.

0x0C: Directions 0-7

#### D.11 Directions 8-15: 0x0D

This register contains eight directions, for packets with a mismatch in bits 15..8 of the node-identifier. The direction in which a packet will be routed is goverened by the most significant mismatching bit.

-XMOS-

Bits	Perm	Init	Description
31:28	RW	0	The direction for packets whose dimension is F.
27:24	RW	0	The direction for packets whose dimension is E.
23:20	RW	0	The direction for packets whose dimension is D.
19:16	RW	0	The direction for packets whose dimension is C.
15:12	RW	0	The direction for packets whose dimension is B.
11:8	RW	0	The direction for packets whose dimension is A.
7:4	RW	0	The direction for packets whose dimension is 9.
3:0	RW	0	The direction for packets whose dimension is 8.

**0x0D:** Directions 8-15

#### D.12 Reserved: 0x10

Reserved.

0x10	
Reserved	-

Bits	Perm	Init	Description
31:2	RO	-	Reserved
1	RW	0	Reserved.
0	RW	0	Reserved.

### D.13 Reserved.: 0x11

Reserved.

**0x11:** Reserved.

Bits	Perm	Init	Description
31:2	RO	-	Reserved
1	RW	0	Reserved.
0	RW	0	Reserved.

### D.14 Debug source: 0x1F

Contains the source of the most recent debug event.

-XMOS°

Bits	Perm	Init	Description
31:5	RO	-	Reserved
4	RW		Reserved.
3:2	RO	-	Reserved
1	RW		If set, XCore1 is the source of last GlobalDebug event.
0	RW		If set, XCore0 is the source of last GlobalDebug event.

**0x1F:** Debug source

### D.15 Link status, direction, and network: 0x20 .. 0x28

These registers contain status information for low level debugging (read-only), the network number that each link belongs to, and the direction that each link is part of. The registers control links 0..7.

Bits	Perm	Init	Description
31:26	RO	-	Reserved
25:24	RO		Identify the SRC_TARGET type 0 - SLink, 1 - PLink, 2 - SSCTL, 3 - Undefine.
23:16	RO		When the link is in use, this is the destination link number to which all packets are sent.
15:12	RO	-	Reserved
11:8	RW	0	The direction that this link operates in.
7:6	RO	-	Reserved
5:4	RW	0	Determines the network to which this link belongs, reset as 0.
3	RO	-	Reserved
2	RO		1 when the current packet is considered junk and will be thrown away.
1	RO		1 when the dest side of the link is in use.
0	RO		1 when the source side of the link is in use.

0x20 .. 0x28: Link status, direction, and network

### D.16 PLink status and network: 0x40 .. 0x47

-XMOS<sup>®</sup>

These registers contain status information and the network number that each processor-link belongs to.

Bits	Perm	Init	Description
31:26	RO	-	Reserved
25:24	RO		Identify the SRC_TARGET type 0 - SLink, 1 - PLink, 2 - SSCTL, 3 - Undefine.
23:16	RO		When the link is in use, this is the destination link number to which all packets are sent.
15:6	RO	-	Reserved
5:4	RW	0	Determines the network to which this link belongs, reset as 0.
3	RO	-	Reserved
2	RO		1 when the current packet is considered junk and will be thrown away.
1	RO		1 when the dest side of the link is in use.
0	RO		1 when the source side of the link is in use.

0x40 .. 0x47: PLink status and network

#### D.17 Link configuration and initialization: 0x80 .. 0x88

These registers contain configuration and debugging information specific to external links. The link speed and width can be set, the link can be initialized, and the link status can be monitored. The registers control links 0..7.

Bits	Perm	Init	Description
31	RW		Write to this bit with '1' will enable the XLink, writing '0' will disable it. This bit controls the muxing of ports with overlapping xlinks.
30	RW	0	0: operate in 2 wire mode; 1: operate in 5 wire mode
29:28	RO	-	Reserved
27	RO		Rx buffer overflow or illegal token encoding received.
26	RO	0	This end of the xlink has issued credit to allow the remote end to transmit
25	RO	0	This end of the xlink has credit to allow it to transmit.
24	wo		Clear this end of the xlink's credit and issue a HELLO token.
23	WO		Reset the receiver. The next symbol that is detected will be the first symbol in a token.
22	RO	-	Reserved
21:11	RW	0	Specify min. number of idle system clocks between two continuous symbols witin a transmit token -1.
10:0	RW	0	Specify min. number of idle system clocks between two continuous transmit tokens -1.

0x80 .. 0x88: Link configuration and initialization

### D.18 Static link configuration: 0xA0 .. 0xA7

These registers are used for static (ie, non-routed) links. When a link is made static, all traffic is forwarded to the designated channel end and no routing is attempted. The registers control links C, D, A, B, G, H, E, and F in that order.

Bits	Perm	Init	Description
31	RW	0	Enable static forwarding.
30:9	RO	-	Reserved
8	RW	0	The destination processor on this node that packets received in static mode are forwarded to.
7:5	RO	-	Reserved
4:0	RW	0	The destination channel end on this node that packets received in static mode are forwarded to.

-XMOS"

**0xA0 .. 0xA7:** Static link configuration

# **E** USB Node Configuration

The USB node control registers can be accessed using configuration reads and writes (use write\_node\_config\_reg(device, ...) and read\_node\_config\_reg(device,  $\rightarrow$  ...) for reads and writes).

Number	Perm	Description
0x00	RO	Device identification register
0x04	RW	Node configuration register
0x05	RW	Node identifier
0x51	RW	System clock frequency
0x80	RW	Link Control and Status

Figure 35: Summary

#### E.1 Device identification register: 0x00

This register contains version information, and information on power-on behavior.

0x00: Device identification register

Bits	Perm	Init	Description
31:24	RO	0x0F	Chip identifier
23:16	RO	-	Reserved
15:8	RO	0x02	Revision number of the USB block
7:0	RO	0x00	Version number of the USB block

#### E.2 Node configuration register: 0x04

This register is used to set the communication model to use (1 or 3 byte headers), and to prevent any further updates.

	Bits	Perm	Init	Description
<b>0x04:</b> Node	31	RW	0	Set to 1 to disable further updates to the node configuration and link control and status registers.
iguration	30:1	RO	-	Reserved
register	0	RW	0	Header mode. 0: 3-byte headers; 1: 1-byte headers.



### E.3 Node identifier: 0x05

**0x05:** Node identifier

0x51: System clock frequency

Bits	Perm	Init	Description
31:16	RO	-	Reserved
15:0	RW	0	16-bit node identifier. This does not need to be set, and is present for compatibility with XS1-switches.

### E.4 System clock frequency: 0x51

Bits	Perm	Init	Description
31:7	RO	-	Reserved
6:0	RW	25	Oscillator clock frequency in MHz rounded up to the nearest integer value. Only values between 5 and 100 MHz are valid - writes outside this range are ignored and will be NACKed. This field must be set on start up of the device and any time that the input oscillator clock frequency is changed. It must contain the system clock frequency in MHz rounded up to the nearest integer value.

E.5 Link Control and Status: 0x80

Bits	Perm	Init	Description
31:28	RO	-	Reserved
27	RO		Rx buffer overflow or illegal token encoding received.
26	RO	0	This end of the xlink has issued credit to allow the remote end to transmit
25	RO	0	This end of the xlink has credit to allow it to transmit.
24	WO		Clear this end of the xlink's credit and issue a HELLO token.
23	WO		Reset the receiver. The next symbol that is detected will be the first symbol in a token.
22	RO	-	Reserved
21:11	RW	1	Specify min. number of idle system clocks between two contin- uous symbols witin a transmit token -1.
10:0	RW	1	Specify min. number of idle system clocks between two contin- uous transmit tokens -1.

-XMOS

0x80: Link Control and Status 63

# F USB PHY Configuration

The USB PHY is connected to the ports shown in section 10.

The USB PHY is peripheral 1. The control registers are accessed using 32-bit reads and writes (use write\_periph\_32(device, 1, ...) and read\_periph\_32(device,  $\rightarrow$  1, ...) for reads and writes).

Number	Perm	Description	
0x00	wo	UIFM reset	
0x04	RW	UIFM IFM control	
0x08	RW	UIFM Device Address	
0x0C	RW	UIFM functional control	
0x10	RW	UIFM on-the-go control	
0x14	RO	UIFM on-the-go flags	
0x18	RW	UIFM Serial Control	
0x1C	RW	UIFM signal flags	
0x20	RW	UIFM Sticky flags	
0x24	RW	UIFM port masks	
0x28	RW	UIFM SOF value	
0x2C	RO	UIFM PID	
0x30	RO	UIFM Endpoint	
0x34	RW	UIFM Endpoint match	
0x38	RW	OTG Flags mask	
0x3C	RW	UIFM power signalling	
0x40	RW	UIFM PHY control	

Figure 36: Summary

#### F.1 UIFM reset: 0x00

A write to this register with any data resets all UIFM state, but does not otherwise affect the phy.

0x00:	Bits	Perm	Init	Description
UIFM reset	31:0	WO		Value.

#### F.2 UIFM IFM control: 0x04

General settings of the UIFM IFM state machine.

Bits	Perm	Init	Description	
31:8	RO	-	Reserved	
7	RW	0	Set to 1 to enable XEVACKMODE mode.	
6	RW	0	Set to 1 to enable SOFISTOKEN mode.	
5	RW	0	Set to 1 to enable UIFM power signalling mode.	
4	RW	0	Set to 1 to enable IF timing mode.	
3	RO	-	Reserved	
2	RW	0	Set to 1 to enable UIFM linestate decoder.	
1	RW	0	Set to 1 to enable UIFM CHECKTOKENS mode.	
0	RW	0	Set to 1 to enable UIFM DOTOKENS mode.	

0x04: UIFM IFM control

#### F.3 UIFM Device Address: 0x08

The device address whose packets should be received. 0 until enumeration, it should be set to the assigned value after enumeration.

**0x08:** UIFM Device Address

-	Bits	Perm	Init	Description
:	31:7	RO	-	Reserved
:	6:0	RW	0	The enumerated USB device address must be stored here. Only packets to this address are passed on.

### F.4 UIFM functional control: 0x0C

**0x0C:** UIFM functional control

Bits	Perm	Init	Description
31:5	RO	-	Reserved
4:2	RW	1	Set to 0 to disable UIFM to UTMI+ OPMODE mode.
1	RW	1	Set to 1 to switch UIFM to UTMI+ TERMSELECT mode.
0	RW	1	Set to 1 to switch UIFM to UTMI+ XCVRSELECT mode.

### F.5 UIFM on-the-go control: 0x10

This register is used to negotiate an on-the-go connection.

-XMOS<sup>®</sup>



Bits	Perm	Init	Description
31:8	RO	-	Reserved
7	RW	0	Set to 1 to switch UIFM to EXTVBUSIND mode.
6	RW	0	Set to 1 to switch UIFM to DRVVBUSEXT mode.
5	RO	-	Reserved
4	RW	0	Set to 1 to switch UIFM to UTMI+ CHRGVBUS mode.
3	RW	0	Set to 1 to switch UIFM to UTMI+ DISCHRGVBUS mode.
2	RW	0	Set to 1 to switch UIFM to UTMI+ DMPULLDOWN mode.
1	RW	0	Set to 1 to switch UIFM to UTMI+ DPPULLDOWN mode.
0	RW	0	Set to 1 to switch UIFM to IDPULLUP mode.

**0x10:** UIFM on-the-go control

### F.6 UIFM on-the-go flags: 0x14

Status flags used for on-the-go negotiation

Bits	Perm	Init	Description
31:6	RO	-	Reserved
5	RO	0	Value of UTMI+ Bvalid flag.
4	RO	0	Value of UTMI+ IDGND flag.
3	RO	0	Value of UTMI+ HOSTDIS flag.
2	RO	0	Value of UTMI+ VBUSVLD flag.
1	RO	0	Value of UTMI+ SESSVLD flag.
0	RO	0	Value of UTMI+ SESSEND flag.

-XMOS"

**0x14:** UIFM on-the-go flags

Bits	Perm	Init	Description
31:7	RO	-	Reserved
6	RO	0	1 if UIFM is in UTMI+ RXRCV mode.
5	RO	0	1 if UIFM is in UTMI+ RXDM mode.
4	RO	0	1 if UIFM is in UTMI+ RXDP mode.
3	RW	0	Set to 1 to switch UIFM to UTMI+ TXSE0 mode.
2	RW	0	Set to 1 to switch UIFM to UTMI+ TXDATA mode.
1	RW	1	Set to 0 to switch UIFM to UTMI+ TXENABLE mode.
0	RW	0	Set to 1 to switch UIFM to UTMI+ FSLSSERIAL mode.

#### F.7 UIFM Serial Control: 0x18

**0x18:** UIFM Serial Control

### F.8 UIFM signal flags: 0x1C

Set of flags that monitor line and error states. These flags normally clear on the next packet, but they may be made sticky by using PER\_UIFM\_FLAGS\_STICKY, in which they must be cleared explicitly.

Bits	Perm	Init	Description
31:7	RO	-	Reserved
6	RW	0	Set to 1 when the UIFM decodes a token successfully (e.g. it passes CRC5, PID check and has matching device address).
5	RW	0	Set to 1 when linestate indicates an SEO symbol.
4	RW	0	Set to 1 when linestate indicates a K symbol.
3	RW	0	Set to 1 when linestate indicates a J symbol.
2	RW	0	Set to 1 if an incoming datapacket fails the CRC16 check.
1	RW	0	Set to the value of the UTMI_RXACTIVE input signal.
0	RW	0	Set to the value of the UTMI_RXERROR input signal

**0x1C:** UIFM signal flags

### F.9 UIFM Sticky flags: 0x20

These bits define the sticky-ness of the bits in the UIFM IFM FLAGS register. A 1 means that bit will be sticky (hold its value until a 1 is written to that bitfield), or normal, in which case signal updates to the UIFM IFM FLAGS bits may be over-written by subsequent changes in those signals.

-XMOS<sup>®</sup>

**0x20:** UIFM Sticky flags

Bits	Perm	Init	Description
31:7	RO	-	Reserved
6:0	RW	0	Stickyness for each flag.

#### F.10 UIFM port masks: 0x24

Set of masks that identify how port 1N, port 1O and port 1P are affected by changes to the flags in FLAGS

Bits	Perm	Init	Description
31:24	RW	0	Bit mask that determines which flags in UIFM_IFM_FLAG[6:0] contribute to port 1?. If any flag listed in this bitmask is high, port 1? will be high.
23:16	RW	0	Bit mask that determines which flags in UIFM_IFM_FLAG[6:0] contribute to port 1P. If any flag listed in this bitmask is high, port 1P will be high.
15:8	RW	0	Bit mask that determines which flags in UIFM_IFM_FLAG[6:0] contribute to port 10. If any flag listed in this bitmask is high, port 10 will be high.
7:0	RW	0	Bit mask that determines which flags in UIFM_IFM_FLAG[6:0] contribute to port 1N. If any flag listed in this bitmask is high, port 1N will be high.

**0x24:** UIFM port masks

### F.11 UIFM SOF value: 0x28

USB Start-Of-Frame counter

**0x28:** UIFM SOF value

Bits	Perm	Init	Description
31:11	RO	-	Reserved
10:8	RW	0	Most significant 3 bits of SOF counter
7:0	RW	0	Least significant 8 bits of SOF counter

-XMOS

### F.12 UIFM PID: 0x2C

The last USB packet identifier received



0>	(2C:
UIFM	PID

Bits	Perm	Init	Description
31:4	RO	-	Reserved
3:0	RO	0	Value of the last received PID.

#### F.13 UIFM Endpoint: 0x30

The last endpoint seen

**0x30** UIFM Endpoint

	Bits	Perm	Init	Description
0:	31:5	RO	-	Reserved
и. И	4	RO	0	1 if endpoint contains a valid value.
t	3:0	RO	0	A copy of the last received endpoint.

### F.14 UIFM Endpoint match: 0x34

This register can be used to mark UIFM endpoints as special.

**0x34:** UIFM Endpoint match

Bits	Perm	Init	Description
31:16	RO	-	Reserved
15:0	RW	0	This register contains a bit for each endpoint. If its bit is set, the endpoint will be supplied on the RX port when ORed with 0x10.

### F.15 OTG Flags mask: 0x38

**0x38:** OTG Flags mask

•	Bits	Perm	Init	Description
	31:0	RW	0	Data

### F.16 UIFM power signalling: 0x3C

	Bits	Perm	Init	Description
<b>0x3C:</b> UIFM power signalling	31:9	RO	-	Reserved
	8	RW	0	Valid
	7:0	RW	0	Data

-XMOS



	Bits	Perm	Init	Description
	31:19	RO	-	Reserved
	18	RW	0	Set to 1 to disable pulldowns on ports 8A and 8B.
	17:14	RO	-	Reserved
	13	RW	0	After an auto-resume, this bit is set to indicate that the resume signalling was for reset (se0). Set to 0 to clear.
	12	RW	0	After an auto-resume, this bit is set to indicate that the resume signalling was for resume (K). Set to 0 to clear.
	11:8	RW	0	Log-2 number of clocks before any linestate change is propa- gated.
)x40:	7	RW	0	Set to 1 to use the suspend controller handle to resume from suspend. Otherwise, the program has to poll the linestate_filt field in phy_teststatus.
PHY	6:4	RW	0	Control the the conf1,2,3 input pins of the PHY.
ntrol	3:0	RO	-	Reserved


-XMOS<sup>®</sup>

### F.17 UIFM PHY control: 0x40

0x40 UIFM PHY contro

# G JTAG, xSCOPE and Debugging

If you intend to design a board that can be used with the XMOS toolchain and xTAG debugger, you will need an xSYS header on your board. Figure 37 shows a decision diagram which explains what type of xSYS connectivity you need. The three subsections below explain the options in detail.

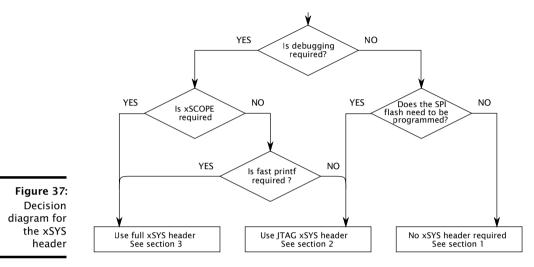

#### G.1 No xSYS header

The use of an xSYS header is optional, and may not be required for volume production designs. However, the XMOS toolchain expects the xSYS header; if you do not have an xSYS header then you must provide your own method for writing to flash/OTP and for debugging.

### G.2 JTAG-only xSYS header

The xSYS header connects to an xTAG debugger, which has a 20-pin 0.1" female IDC header. The design will hence need a male IDC header. We advise to use a boxed header to guard against incorrect plug-ins. If you use a 90 degree angled header, make sure that pins 2, 4, 6, ..., 20 are along the edge of the PCB.

Connect pins 4, 8, 12, 16, 20 of the xSYS header to ground, and then connect:

 $\mathbf{X}$  M()S

- TDI to pin 5 of the xSYS header
- TMS to pin 7 of the xSYS header
- TCK to pin 9 of the xSYS header
- TDO to pin 13 of the xSYS header

The RST\_N net should be open-drain, active-low, and have a pull-up to VDDIO.

#### G.3 Full xSYS header

For a full xSYS header you will need to connect the pins as discussed in Section G.2, and then connect a 2-wire xCONNECT Link to the xSYS header. The links can be found in the Signal description table (Section 4): they are labelled XL0, XL1, etc in the function column. The 2-wire link comprises two inputs and outputs, labelled  $^{1}_{out}$ ,  $^{0}_{out}$ ,  $^{0}_{in}$ , and  $^{1}_{in}$ . For example, if you choose to use XL0 for xSCOPE I/O, you need to connect up XL0<sup>1</sup><sub>out</sub>, XL0<sup>0</sup><sub>out</sub>, XL0<sup>1</sup><sub>in</sub> as follows:

- XL0<sup>1</sup><sub>out</sub> (X0D43) to pin 6 of the xSYS header with a 33R series resistor close to the device.
- XL0<sup>0</sup><sub>out</sub> (X0D42) to pin 10 of the xSYS header with a 33R series resistor close to the device.
- >  $XLO_{in}^{0}$  (X0D41) to pin 14 of the xSYS header.
- >  $XLO_{in}^{1}$  (X0D40) to pin 18 of the xSYS header.

-XM()S

# H Schematics Design Check List

✓ This section is a checklist for use by schematics designers using the XVF3000/XVF3100-TQ128. Each of the following sections contains items to check for each design.

#### H.1 Power supplies

- □ VDDIO and OTP\_VCC supply is within specification before the VDD (core) supply is turned on. Specifically, the VDDIO and OTP\_VCC supply is within specification before VDD (core) reaches 0.4V (Section 12).
- The VDD (core) supply ramps monotonically (rises constantly) from 0V to its final value (0.95V 1.05V) within 10ms (Section 12).
- The VDD (core) supply is capable of supplying 700 mA (Section 12 and Figure 20).
- PLL\_AVDD is filtered with a low pass filter, for example an RC filter, see Section 12

#### H.2 Power supply decoupling

- □ The design has multiple decoupling capacitors per supply, for example at least four0402 or 0603 size surface mount capacitors of 100nF in value, per supply (Section 12).
- □ A bulk decoupling capacitor of at least 10uF is placed on each supply (Section 12).

#### H.3 Power on reset

The RST\_N and TRST\_N pins are asserted (low) during or after power up. The device is not used until these resets have taken place.

#### H.4 Clock

- The CLK input pin is supplied with a clock with monotonic rising edges and low jitter.
- ☐ You have chosen an input clock frequency that is supported by the device (Section 7).

-XM()S

#### H.5 Boot

- $\square$  X0D01 has a 1K pull-up to VDDIOL (Section 8).
- The device is kept in reset for at least 1 ms after VDDIOL has reached its minimum level (Section 8).

#### H.6 JTAG, XScope, and debugging

- $\Box$  You have decided as to whether you need an XSYS header or not (Section G)
- $\Box$  If you have not included an XSYS header, you have devised a method to program the SPI-flash or OTP (Section G).

#### H.7 GPIO

- You have not mapped both inputs and outputs to the same multi-bit port.
- Pins X0D04, X0D05, X0D06, and X0D07 are output only and are, during and after reset, pulled low or not connected (Section 8)

#### H.8 Multi device designs

Skip this section if your design only includes a single XMOS device.

 $\Box$  One device is connected to a QSPI or SPI flash for booting.

-XM()S

Devices that boot from link have, for example, X0D06 pulled high and have link XL0 connected to a device to boot from (Section 8).

# I PCB Layout Design Check List

✓ This section is a checklist for use by PCB designers using the XS2-UF16A-512-TQ128. Each of the following sections contains items to check for each design.

#### I.1 Ground Plane

- □ Multiple vias (eg, 9) have been used to connect the center pad to the PCB ground plane. These minimize impedance and conduct heat away from the device. (Section 12.4).
- Other than ground vias, there are no (or only a few) vias underneath or closely around the device. This create a good, solid, ground plane.

#### I.2 Power supply decoupling

- $\Box$  The decoupling capacitors are all placed close to a supply pin (Section 12).
- $\Box$  The decoupling capacitors are spaced around the device (Section 12).
- The ground side of each decoupling capacitor has a direct path back to the center ground of the device.

#### I.3 PLL\_AVDD

The PLL\_AVDD filter (especially the capacitor) is placed close to the PLL\_AVDD pin (Section 12).

-XM()S

# J Microphone and Acoustic DSP Documentation

Document Title	Information	Document Number
XVF3000/3100 DSP Databrief	XVF3000 DSP Use and Configuration	X9249

# **K** Associated Design Documentation

Document Title	Information	Document
Estimating Power Consumption For XS1-UF Devices	Power consumption	
XMOS Programming Guide	Timers, ports, clocks, cores and channels	Link
xTIMEcomposer User Guide	Compilers, assembler and linker/mapper	Link
	Timing analyzer, xScope, debugger	
	Flash and OTP programming utilities	

# L Related Documentation

Document Title	Information	Document
xCORE200: the XMOS XS2 Architecture	ISA manual	Link
I/O timings for xCORE200	Port timings	Link
xCONNECT Architecture	Link, switch and system information	Link
XS1-UF Link Performance and Design Guidelines	Link timings	
XS1-UF Clock Frequency Control	Advanced clock control	

-XMOS"-

## **M** Revision History

Date	Description
2017-10-10	Preliminary release (2)



Copyright © 2017, All Rights Reserved.

X011274,

Xmos Ltd. is the owner or licensee of this design, code, or Information (collectively, the "Information") and is providing it to you "AS IS" with no warranty of any kind, express or implied and shall have no liability in relation to its use. Xmos Ltd. makes no representation that the Information, or any particular implementation thereof, is or will be free from any claims of infringement and again, shall have no liability in relation to any such claims.